






# ASSEMBLY INSTRUCTIONS

CVFNR4577


## PARTS

S.NO.	DESCRIPTION	QNT
A	 WOODEN TOP	01
B	 IRON LEG B1 & B2	02

## HARDWARE


S.NO.	DESCRIPTION	QNT
C	 WASHER	06
D	 SPRING WASHER	06
E	 BOLT	06
F	 SPANNER	01

### STEP - 1

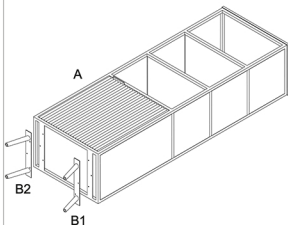


lay down the cabinet on the floor, Align the iron legs with holes on the bottom of the cabinet. (as shown in figure above).


### STEP - 2

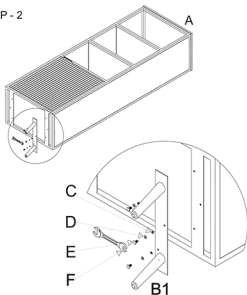

### STEP - 3

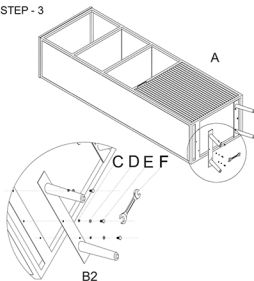

### COMPLETED

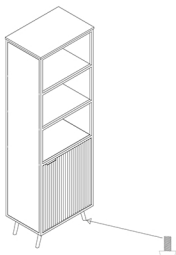

Leveller are provided at the bottom to balance the product on uneven surface

MADE IN INDIA