


# ASSEMBLY INSTRUCTIONS



CVFDR1311 NOT SUPPLIED


## PARTS

S.NO.	DESCRIPTION	QNT
A		BODY 01
B		LEG 02
C		STRETCHER 01

## HARDWARE


S.NO.	DESCRIPTION	QNT
D		WASHER 10
E		SPRING WASHER 10
F		JCBC M6 x 40 mm 08
G		JCBC M6 x 20 mm 02
H		ALLEN KEY 01
I		HANDLE KNOB 04
J		JCMC 35 mm 04

### STEP - 1

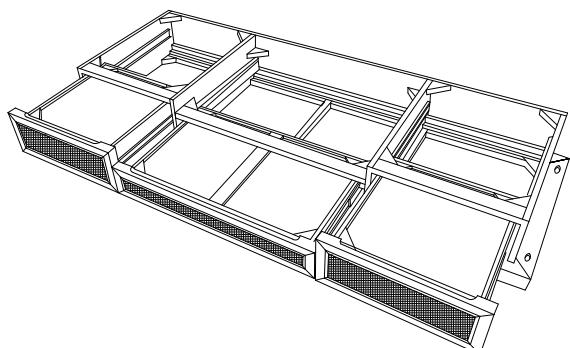


Position body ( a ) as shown above, with the drawer pulled out

### STEP - 2

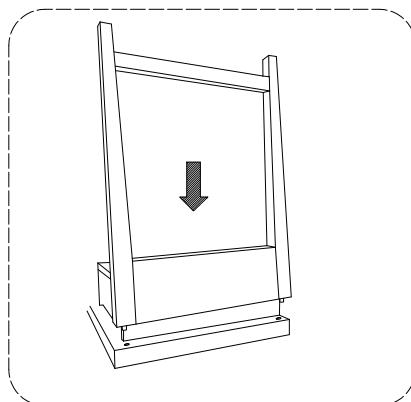

Install the legs as shown in the picture, position the dowel in the hole located on the body top


### STEP - 3

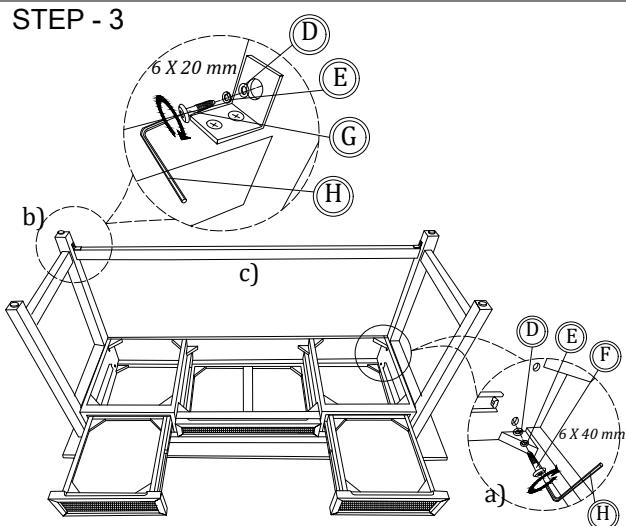

- Install the stretcher ( c ) , then lock it between the body and legs using Washer ( A ), Spring Washer ( B ), JCBC M6x40 ( C ), Then tighten with allen key ( E )
- Lock the stretcher with the legs using Washer ( A ), Spring Washer ( B ), JCBC M6x20 ( D ), Then tighten with allen key ( E )

### STEP - 4

Install the knob ( I ) on the drawer, lock it with a JCMC ( J ) screw and tighten with a screwdriver

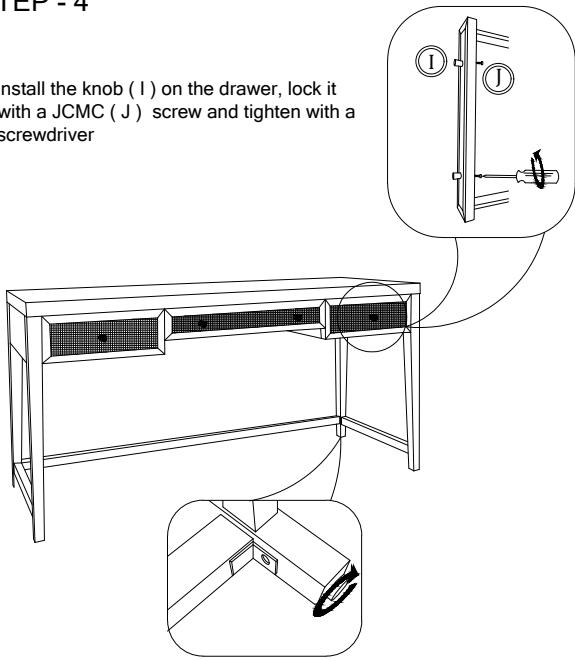

Leveller are provided at the bottom to the balance on uneven surface

MADE IN INDONESIA