


ASSEMBLY INSTRUCTIONS

ASSEMBLE IT BY FOLLOWING STEPS .

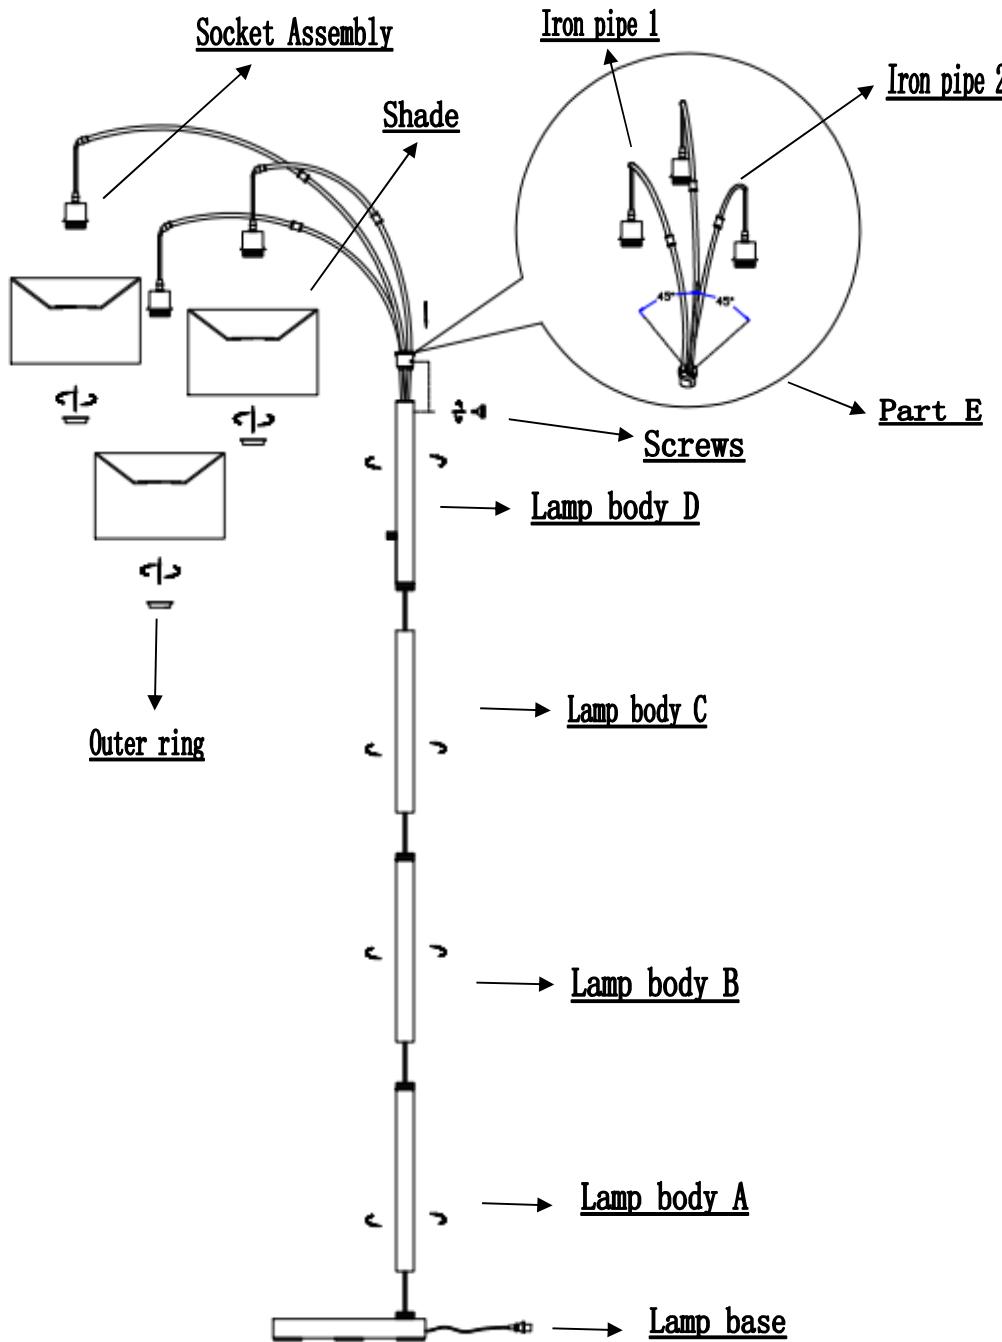

1. Adjust the orientation of iron pipe 1 and iron pipe 2 as image shown, and then lock the nut at the bottom of part E.
2. Place the Lamp Base on the floor, screw the lamp body A into the lamp base while pulling cord through the base.
3. Screw the lamp body B into the lamp body A while pulling cord through the base. Be careful not TO Twist The Power Cord.
4. Screw the lamp body C into the lamp body B while pulling cord through the base. Be careful not TO Twist The Power Cord.
5. Screw the lamp body D into the lamp body C while pulling cord through the base. Be careful not TO Twist The Power Cord.
6. Screw the part E into the lamp body D while pulling cord through the base, keep the part E same direction as the base and then tighten the part E by the screws.
7. Place the shade into the Socket Assembly and rotate the outer ring to lock
8. Please Use 100W Bulb (Bulb not Included)

IMPORTANT SAFETY INSTRUCTIONS

CAUTION: THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER), AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY, IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG, IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN, NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED, DO NOT ALTER THE PLUG.