






ASSEMBLY INSTRUCTIONS

CVFN4576


PARTS

S.NO.	DESCRIPTION	QNT
A	 SIDEBOARD	01
B	 IRON LEG B1 & B2	02
C	 IRON MIDDLE LEG	01

HARDWARE


S.NO.	DESCRIPTION	QNT
D	 WASHER	08
E	 SPRING WASHER	08
F	 BOLT	08
G	 SPANNER	01

STEP - 1

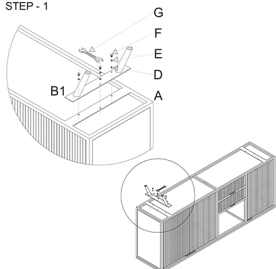


lay down the cabinet on the floor. Align the iron legs with holes on the bottom of the cabinet. (as shown in figure above).


STEP - 2

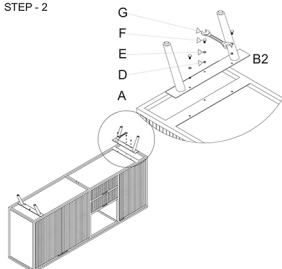

STEP - 3

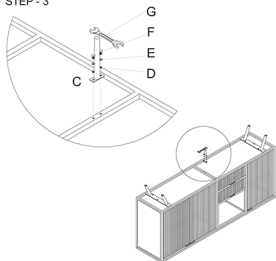

COMPLETED

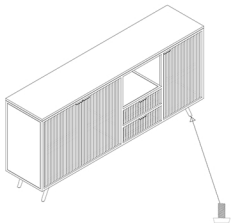

Leveller are provided at the bottom to balance the product on uneven surface

MADE IN INDIA