
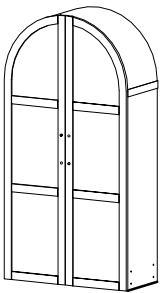





# ASSEMBLY AND ANTI TIP KIT INSTALATION INSTRUCTIONS


PRODUCT NAME : CVFDR1157 TALL CABINET



| PARTS LIST: |                          |                                                                                     | QTY   |
|-------------|--------------------------|-------------------------------------------------------------------------------------|-------|
| Body        |                          |    | 1pc   |
| Shelf       |                          |    | 1pc   |
| HARDWARE:   |                          |                                                                                     | QTY   |
| A.          | Metal Leg                |    | 4pcs  |
| B.          | Shelf Pin                |  | 4pcs  |
| C.          | Ø6 x 25mmL Machine Screw |  | 4pcs  |
| D.          | Hexagon Nut              |  | 8pcs  |
| E.          | Lock Washer              |  | 12pcs |
| F.          | Flat Washer              |  | 12pcs |
| G.          | Tipping - Restraint      |  | 1set  |
| H.          | Ø4mm Allen Wrench        |  | 1pc   |
| I.          | Wrench                   |  | 1pc   |


## STEP 1

\*NOTE: Please remove the middle shelf first

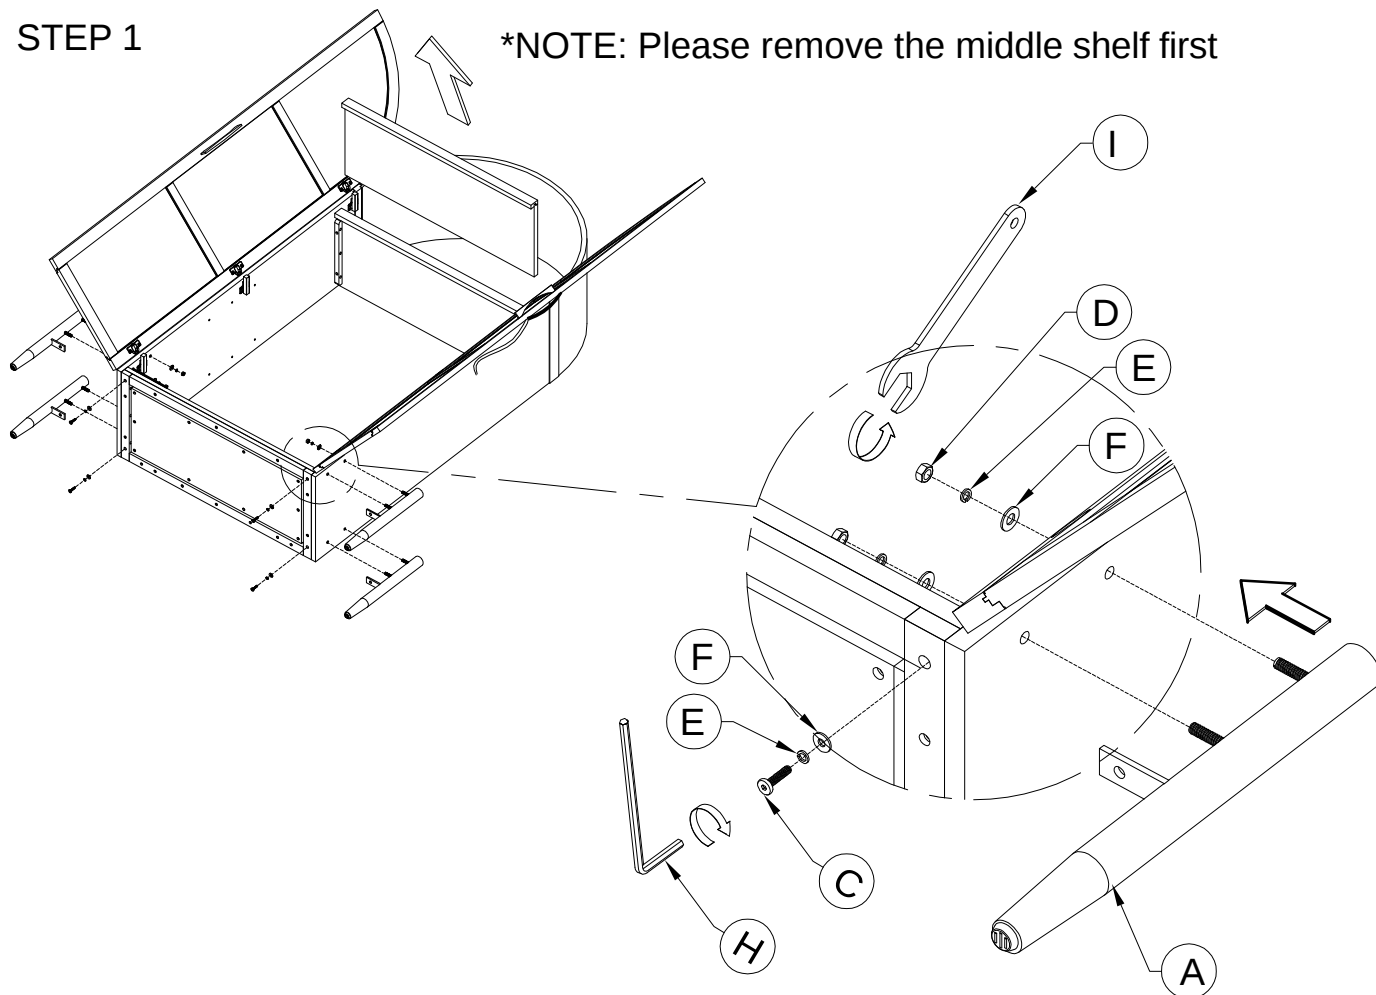



## STEP 2

\*NOTE: Insert the pin shelf by push into the hole on shelf panel


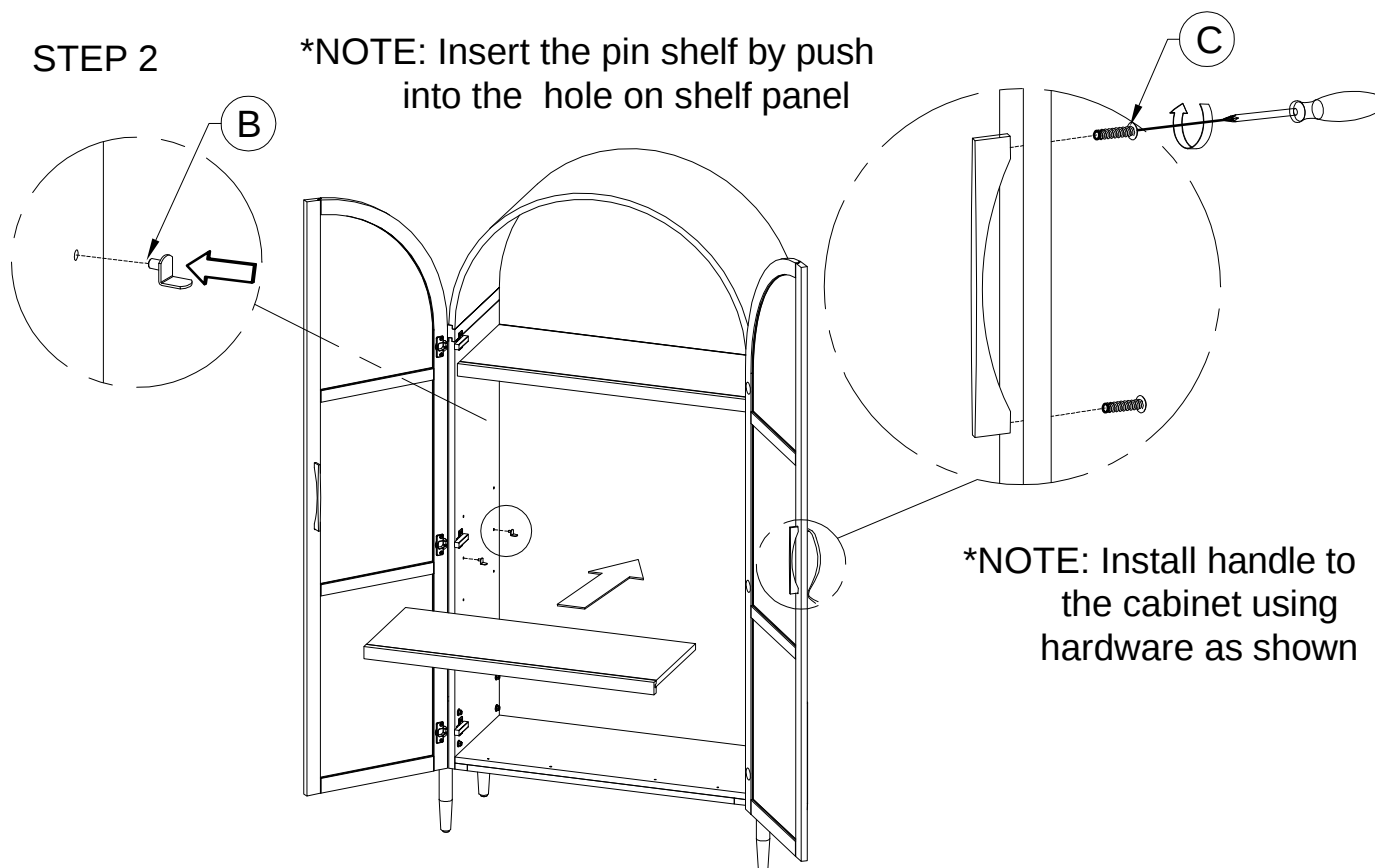


## STEP 3


\*NOTE: Install handle to the cabinet using hardware as shown

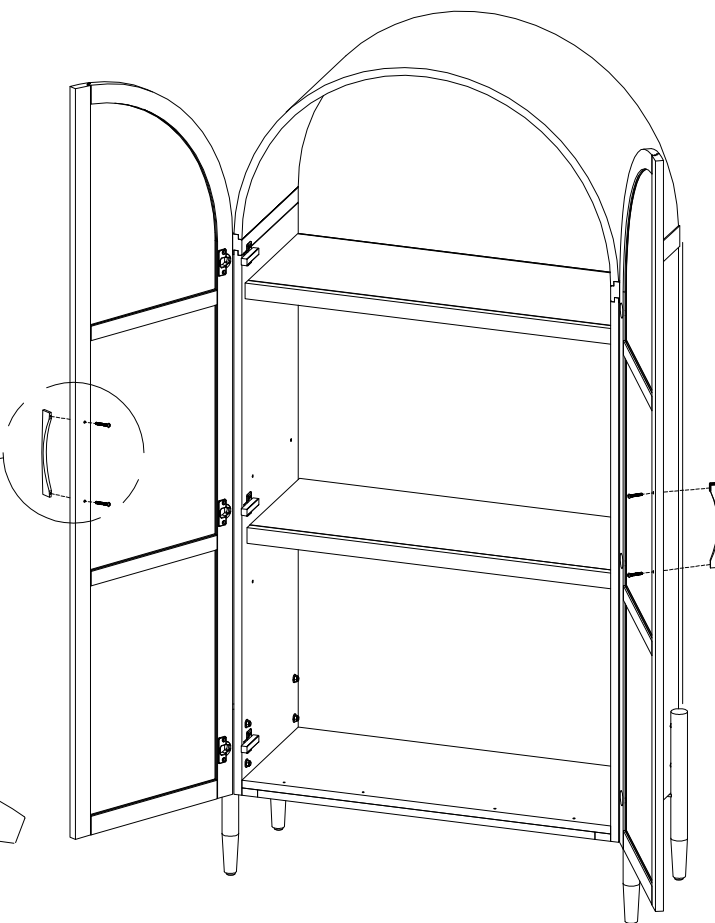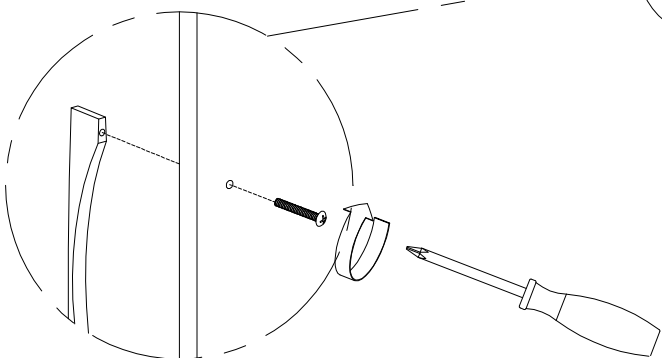

## STEP 4

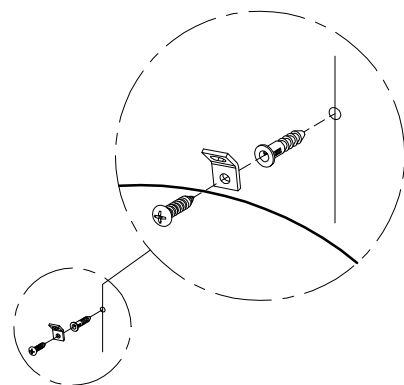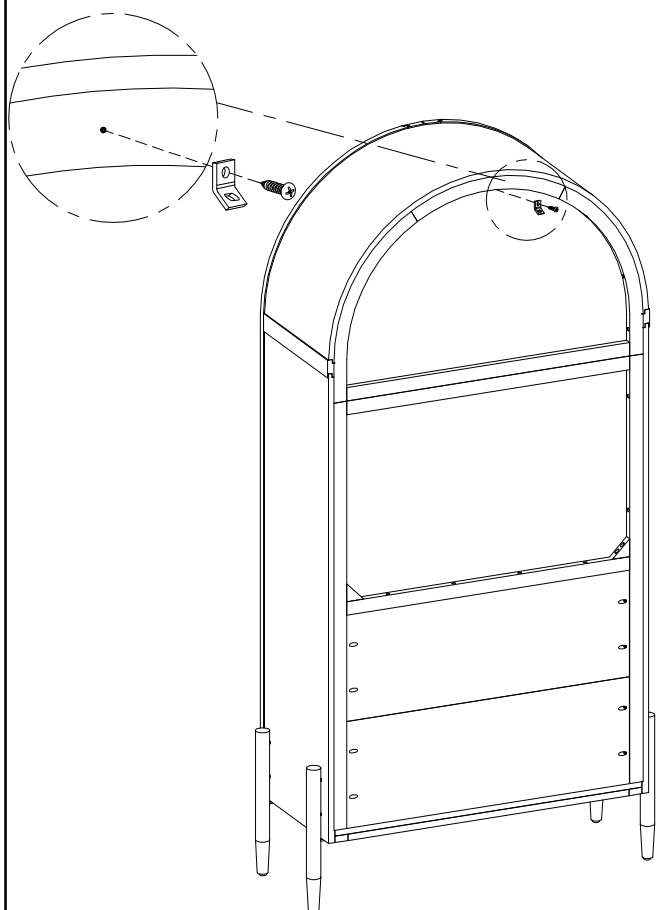

## STEP 5

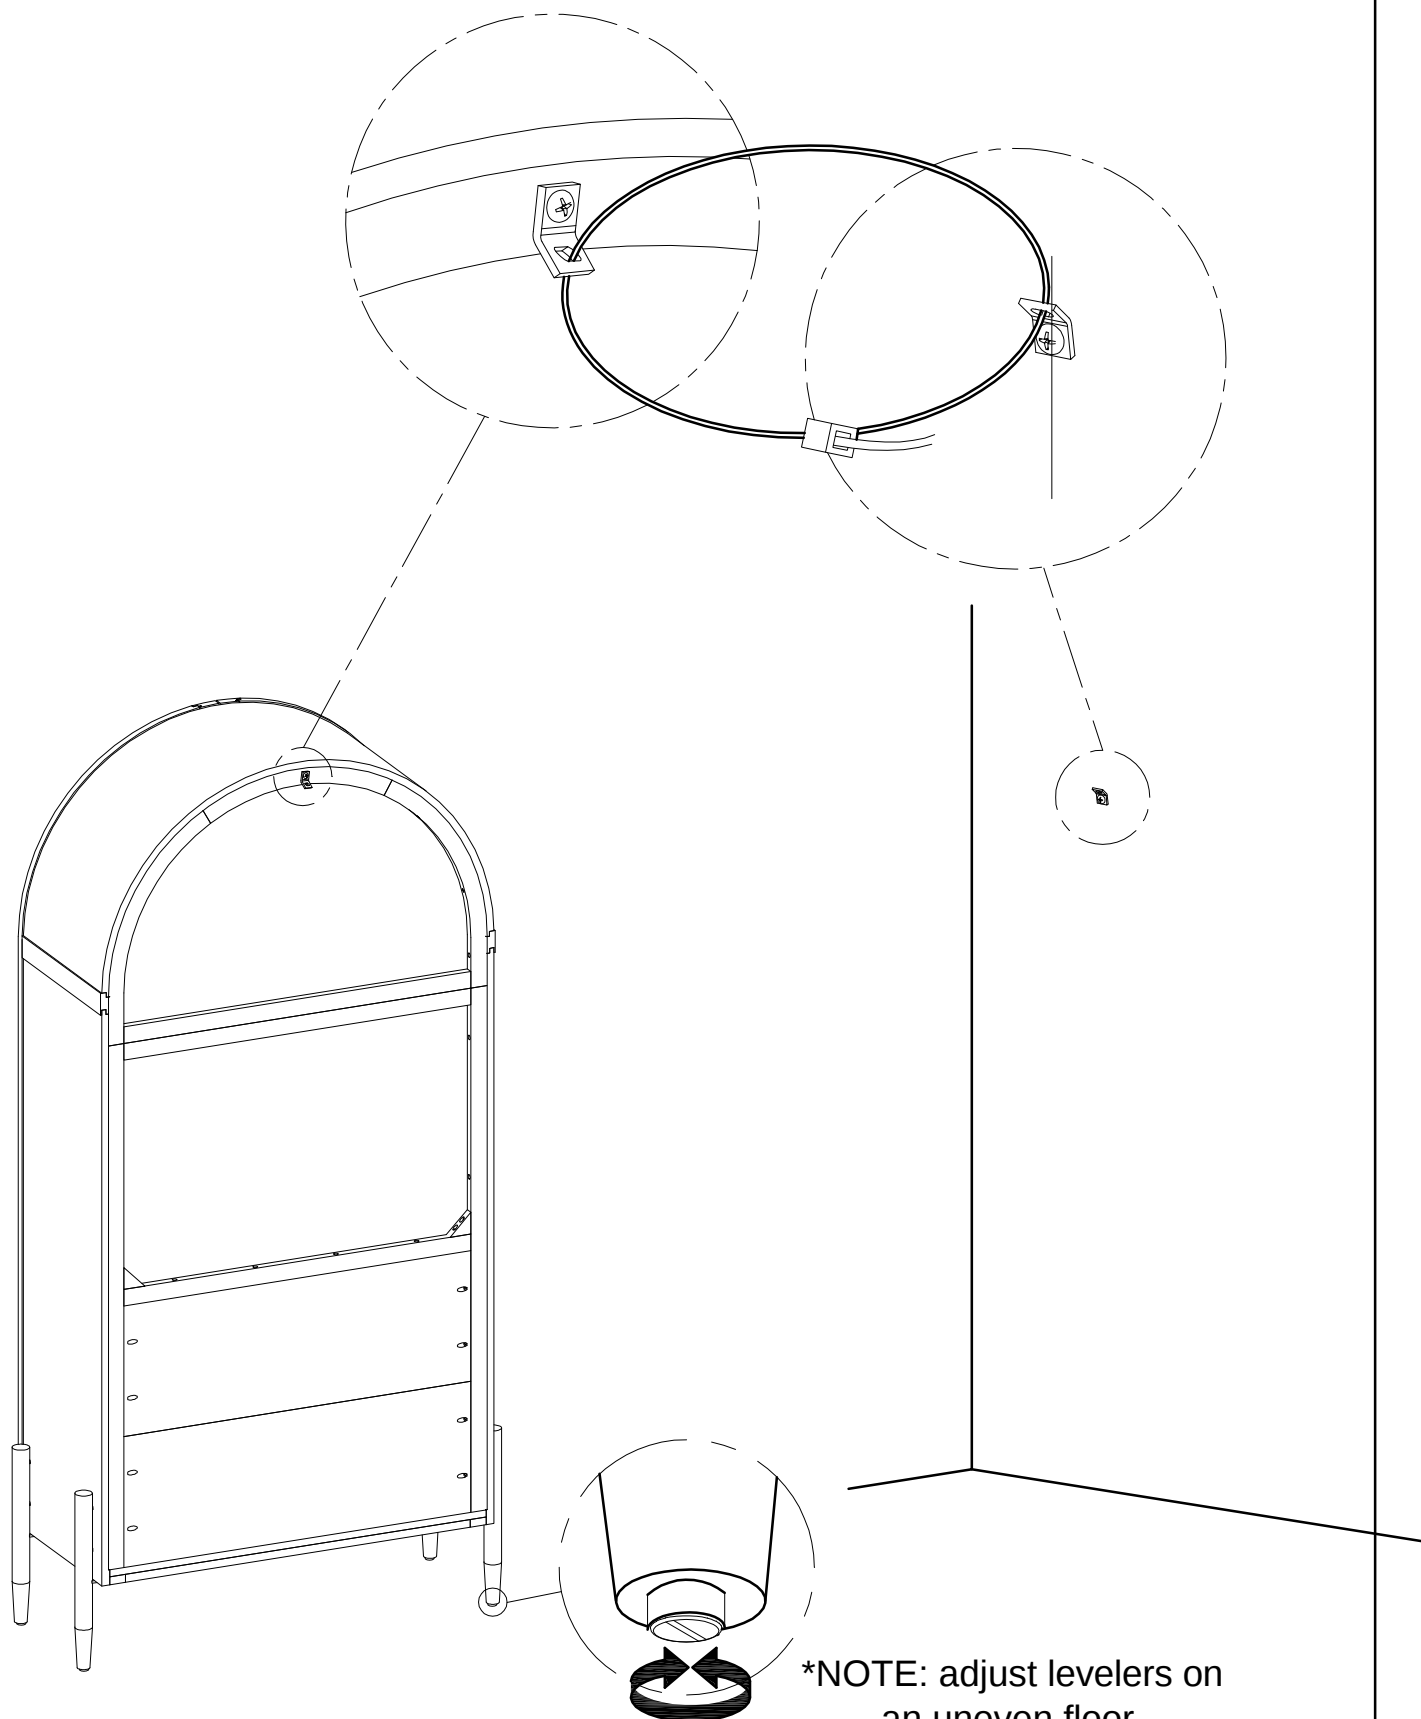

**\*NOTE:** adjust levelers on an uneven floor.