


Assembly Instructions

Item No:

BKEN-QHB-BLFS / QUEEN 5/0 HEADBOARD W/SLATS
BKEN-QFBR-BLFS / QUEEN 5/0 FOOTBOARD 5/0 & SIDE RAILS
BKEN-QSTD-BLFS / QUEEN 5/0 STORAGE DRAWER



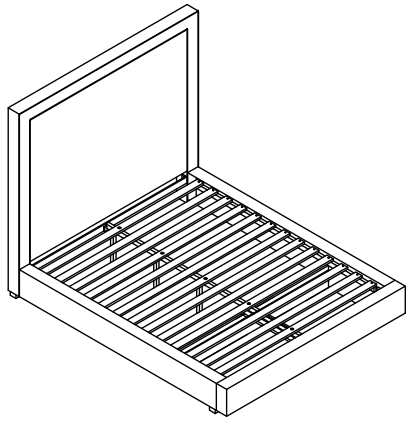






BEFORE ASSEMBLY


Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take time to read and follow assembly instructions carefully.

Part List

When unpacking, please be careful not to discard any parts with packaging. Before continuing, please make sure you have following parts:

PARTS LIST OF BKEN-QHB-BLFS	
(A)	 Headboard: 1Pc
(B)	 Bun Foot: 2Pcs
(C)	 Slat Roll 13pcs/1set

PARTS LIST OF BKEN-QFBR-BLFS	
(B)	 Bun Foot: 2Pcs
(D)	 Footboard: 1Pc
(ER)	 Right Side Rail: 1Pc
(EL)	 Left Side Rail: 1Pc
(F)	 Center Rail Support: 1Pc
(G)	 Center Slat Support Leg: 3Pcs

PARTS LIST OF BKEN-QSTD-BLFS	
(H)	 Drawer Support Leg (70mm): 2Pcs
(I)	 Drawer Support Leg (51mm): 2Pcs
(J)	 Drawer Frame: 1Pc


BKEN-QHB-BLFS HARDWARE LIST			
NO.	DRAWING	DES.	QTY
H1		Allen Bolt Ø5/16" x 55mm	2 PCS
H2		Spring Washer Ø5/16"	2 PCS
H3		Flat Washer Ø5/16" x 19mm	2 PCS
H4		Allen Key #4 x 60mm	1 PC
H5		Wood Dowel	2 PCS
H6		Screw #4 x 30mm	27 PCS
H7		Allen Bolt Ø1/4" x 32mm	5 PCS
H8		Spring Washer Ø1/4"	5 PCS
H9		Flat Washer Ø1/4" x 19mm	5 PCS


BKEN-QHBR-BLFS HARDWARE LIST			
NO.	DRAWING	DES.	QTY
H1		Allen Bolt Ø5/16" x 55mm	2 PCS
H2		Spring Washer Ø5/16"	2 PCS
H3		Flat Washer Ø5/16" x 19mm	2 PCS
H4		Allen Key #4 x 60mm	1 PC
H5		Wood Dowel	2 PCS
H10		Full -Thread Bolt Ø5/16" x 80mm	4 PCS
H11		Curve Washer Ø5/16" x 22mm	4 PCS
H12		Hex Nut	4 PCS
H13		Open Wrench	1 PC

BKEN-QSTD-BLFS HARDWARE LIST			
NO.	DRAWING	DES.	QTY
H4		Allen Key #4 x 60mm	1 PC
H7		Allen Bolt Ø1/4" x 32mm	8 PCS
H8		Spring Washer Ø1/4"	16 PCS
H9		Flat Washer Ø1/4" x 19mm	8 PCS
H14		Allen Bolt Ø1/4" x 38mm	8 PCS
H15		Flat Washer Ø1/4" x 22mm	8 PCS
H16		Castor	1 PC
H17		Allen Bolt Ø1/4" x 15mm	4 PCS
H18		Screw #4 x 20mm	2 PCS

Step 1


Attach Bun Foot (B) to Headboard (A), using Flat Washer (H3) , Spring Washer (H2), Bolt (H1) and Wood Dowel (H5), tighten with Allen key (H4).

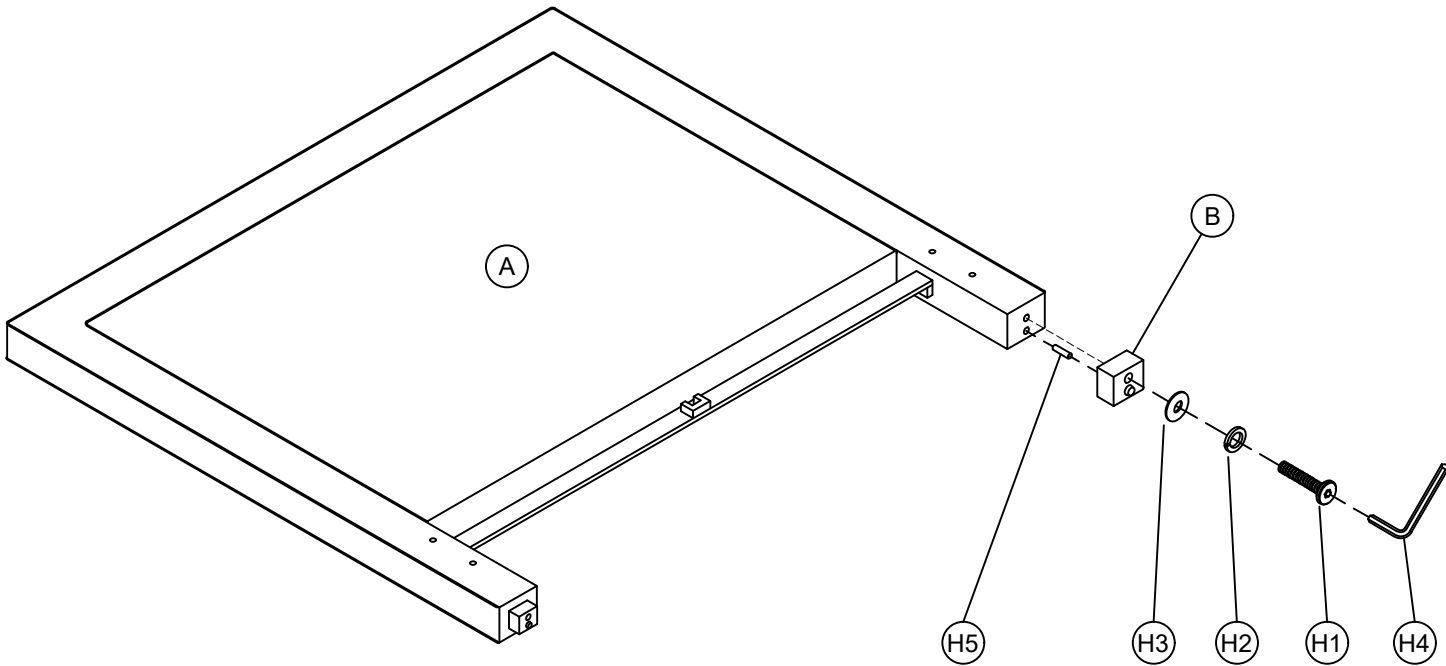


H1		Allen Bolt Ø5/16" x 55mm	2 PCS
H2		Spring Washer Ø5/16"	2 PCS
H3		Flat Washer Ø5/16" x 19mm	2 PCS
H4		Allen Key #4 x 60mm	1 PC
H5		Wood Dowel	2 PCS

Step 2


Attach Bun Foot (B) to Side Rails EL & ER, using Flat Washer (H3) , Spring Washer (H2), Bolt (H1) and Wood Dowel (H5), tighten with Allen key (H4).

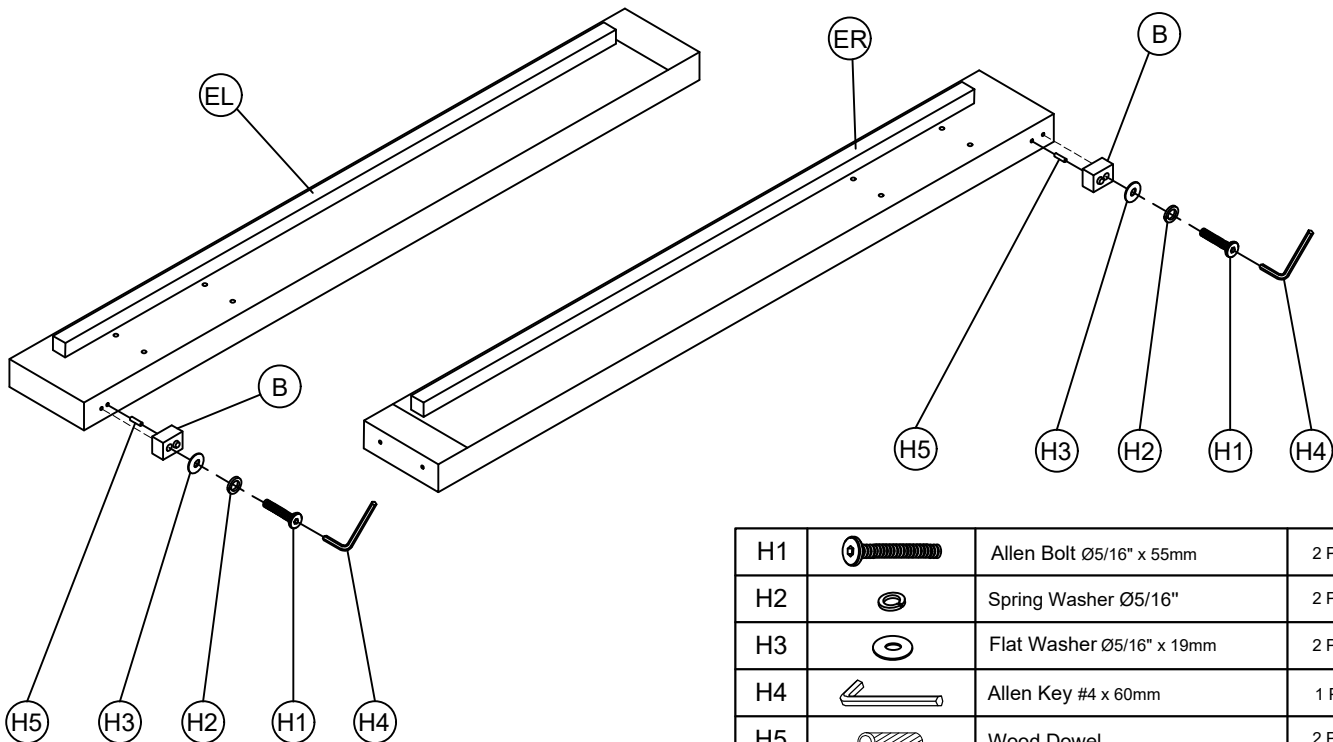

H1		Allen Bolt Ø5/16" x 55mm	2 PCS
H2		Spring Washer Ø5/16"	2 PCS
H3		Flat Washer Ø5/16" x 19mm	2 PCS
H4		Allen Key #4 x 60mm	1 PC
H5		Wood Dowel	2 PCS

Step 3


Attach Headboard (A) to Side Rails (E (L&R)),using Curve Washer (H11) , Hex Nut (H12) and Full -Thread Bolt (H10), tighten with Open Wrench (H13).

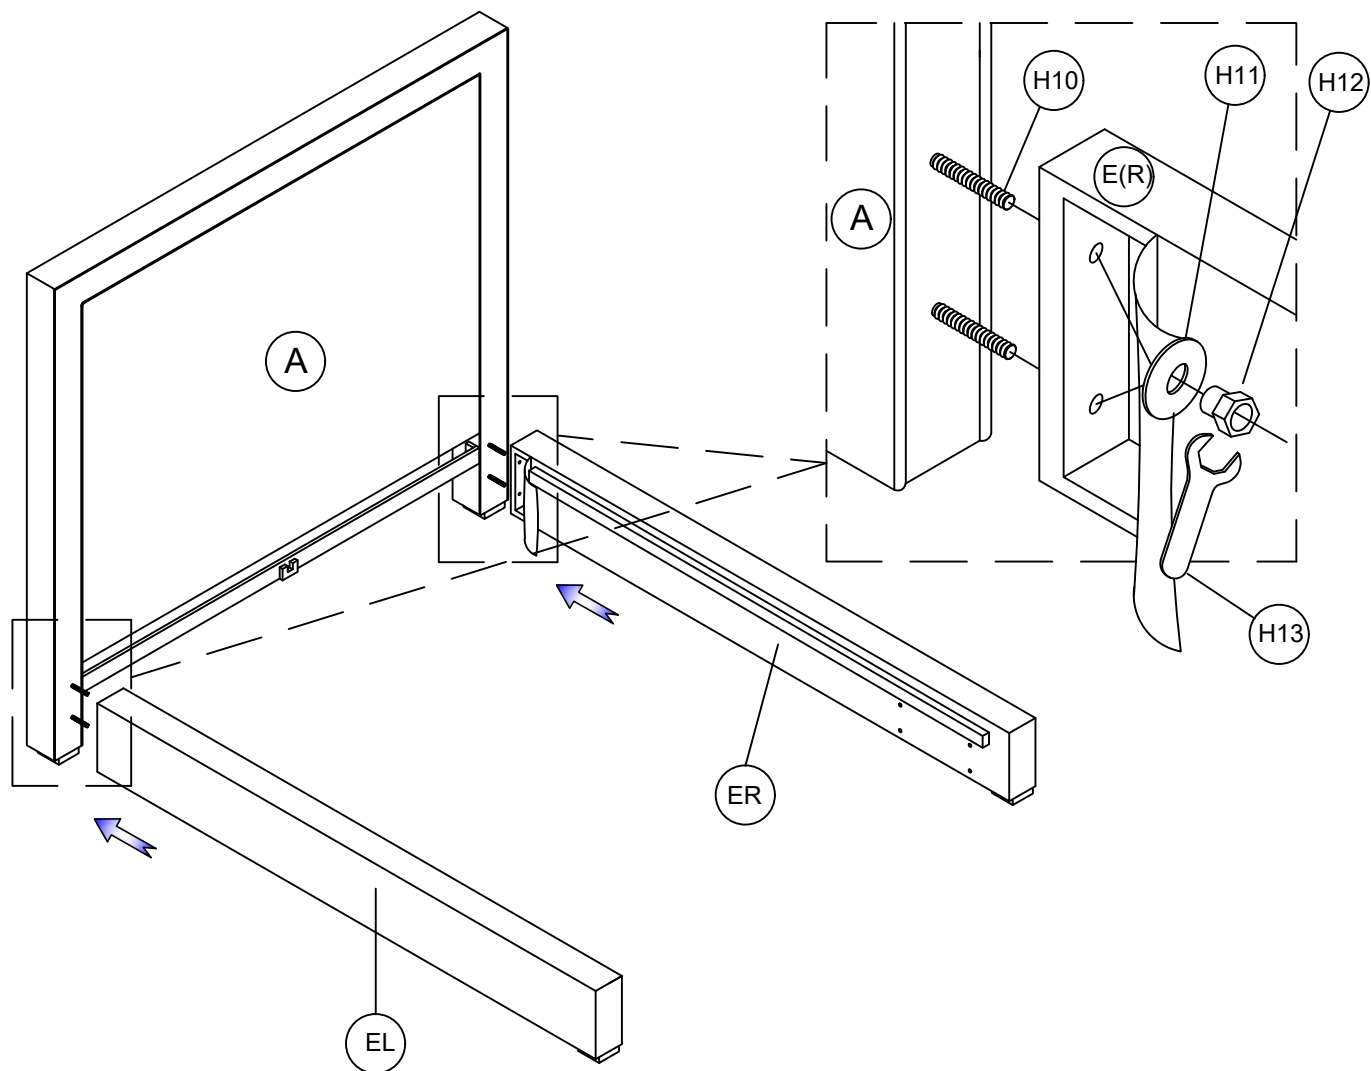

H10		Full -Thread BoltØ5/16" x 80mm	4 PCS
H11		Curve WasherØ5/16" x 22mm	4 PCS
H12		Hex Nut	4 PCS
H13		Open Wrench	1 PC

Step 4


Screw in Drawer Support Leg (70mm) (H), Drawer Support Leg (51mm) (I) to Drawer Frame (J). Attach Castor (H16), to Drawer Frame (J) using Bolt (H17), tighten with Allen key (H4).

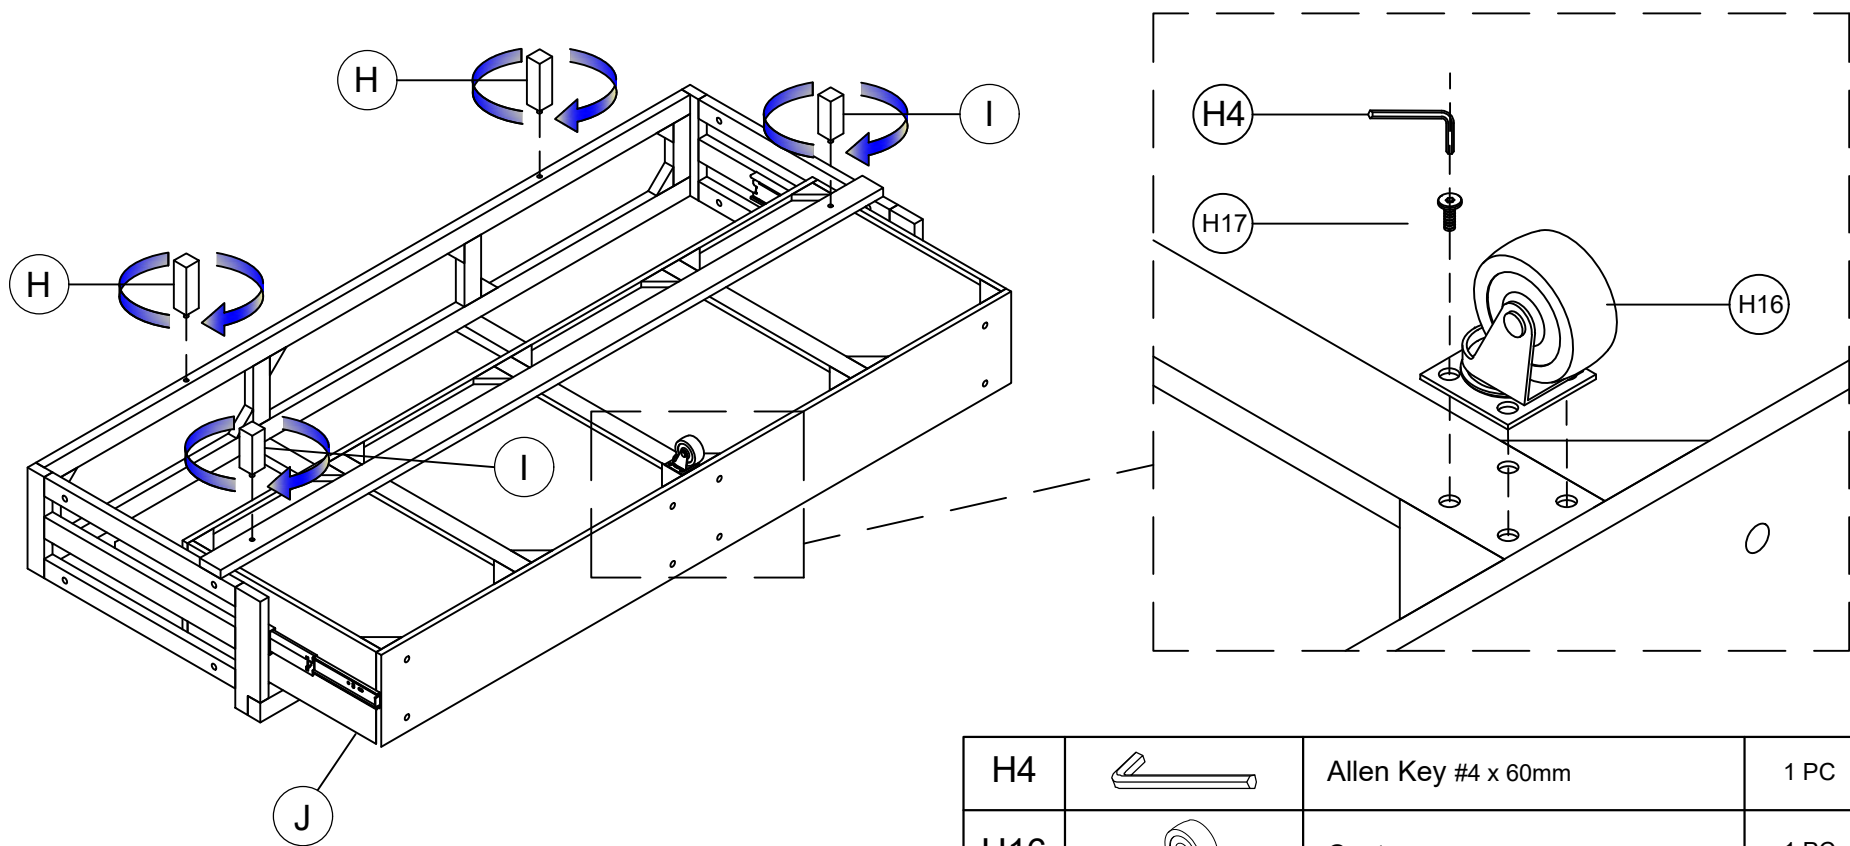


H4		Allen Key #4 x 60mm	1 PC
H16		Castor	1 PC
H17		Allen Bolt Ø1/4" x 15mm	4 PCS

Step 5


Attach Drawer Frame (J) to Footboard (D),using Flat Washer (H9) , Spring Washer (H8), and Bolt (H7), tighten with Allen key (H4).

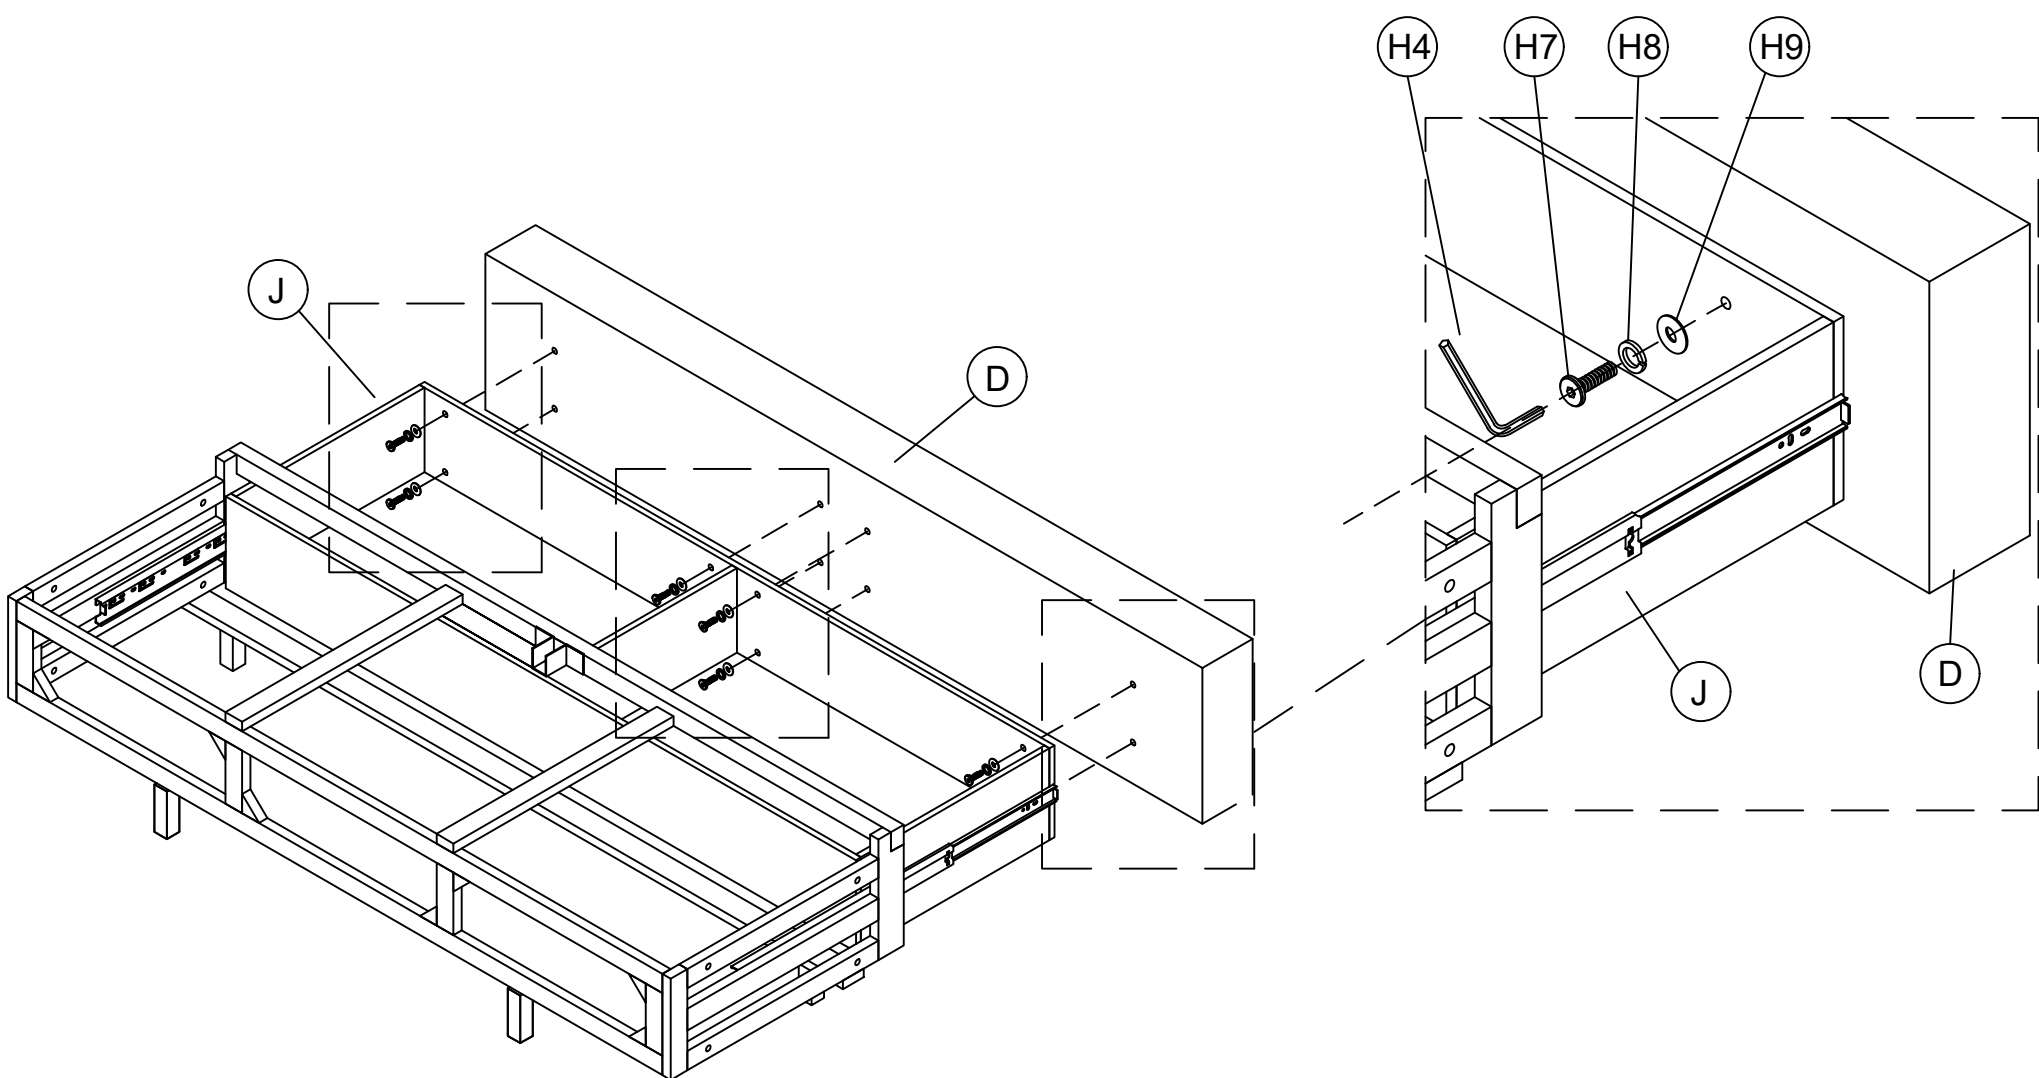

H4		Allen Key #4 x 60mm	1 PC
H7		Allen Bolt Ø1/4" x 32mm	8 PCS
H8		Spring Washer Ø1/4"	8 PCS
H9		Flat Washer Ø1/4" x 19mm	8 PCS

Step 6


Attach Storage Footboard to Side Rails (E (L&R)) using Flat Washer (H9) , Spring Washer (H8) and Bolt (H14), tighten with Allen key (H14).

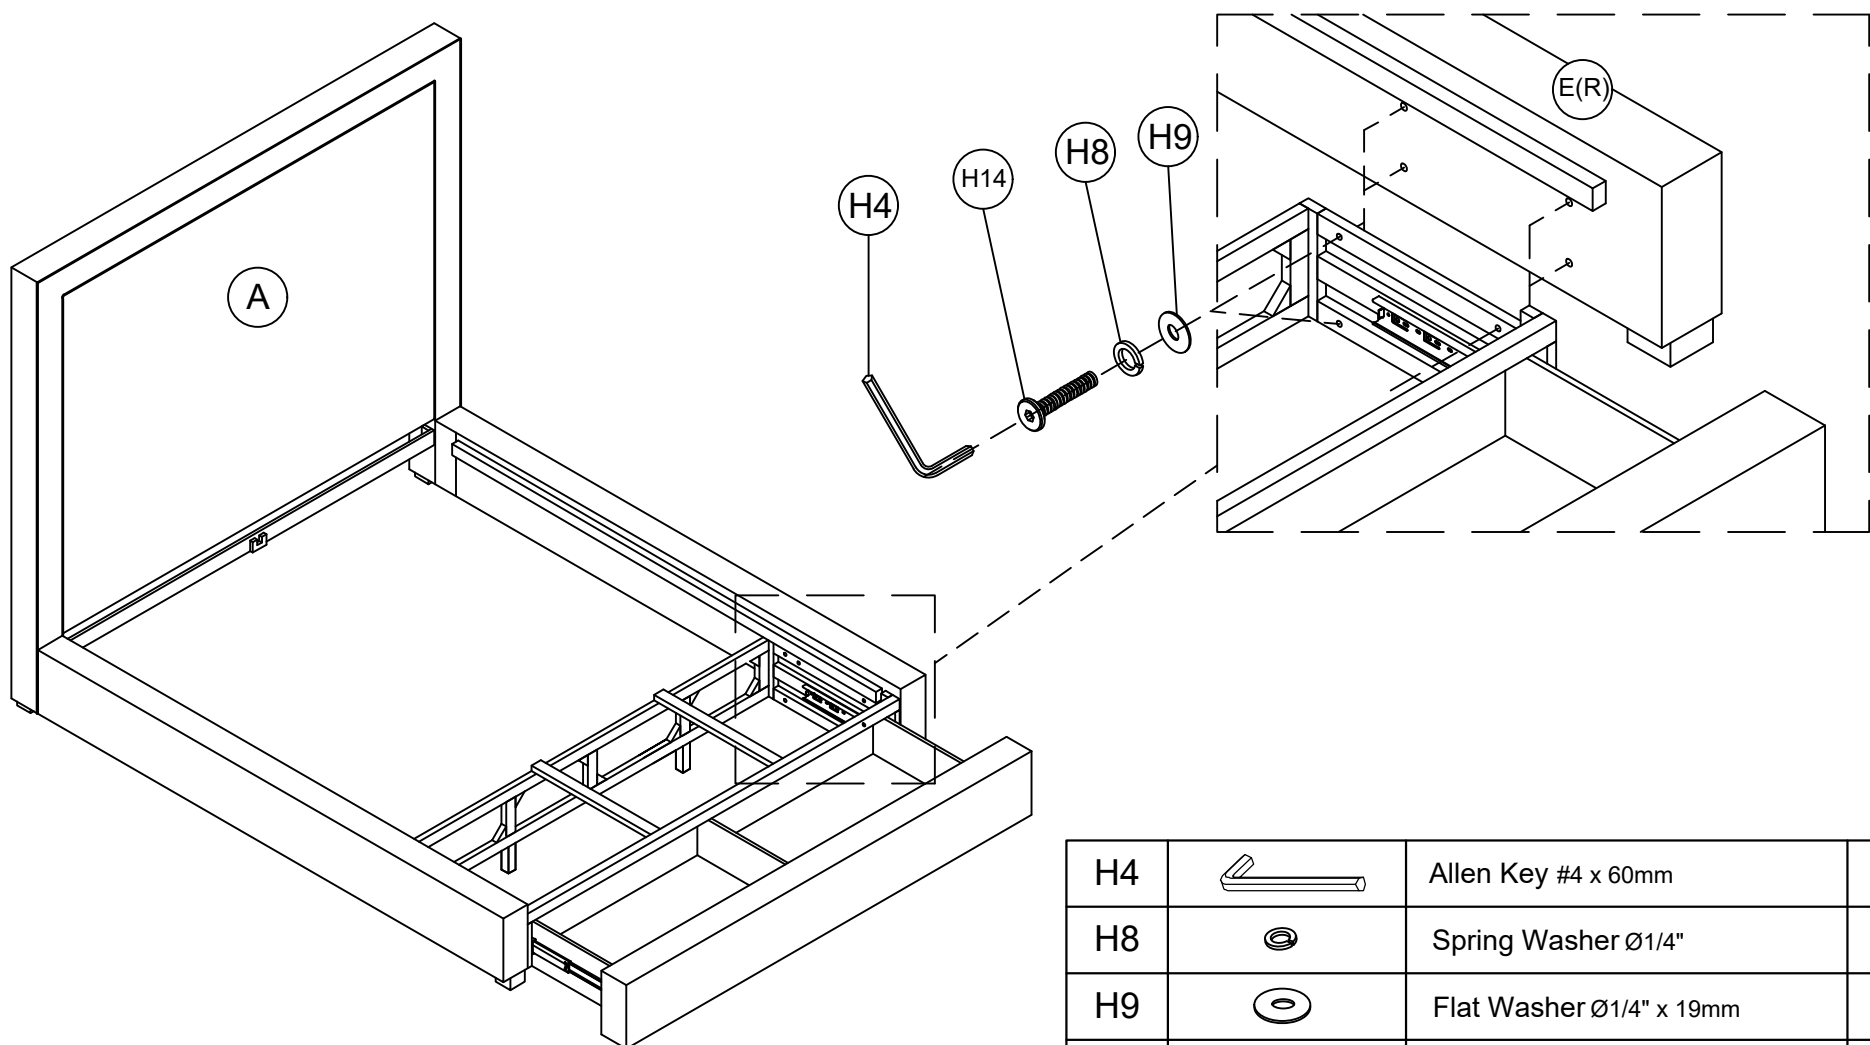

H4		Allen Key #4 x 60mm	1 PC
H8		Spring Washer Ø1/4"	8 PCS
H9		Flat Washer Ø1/4" x 19mm	8 PCS
H14		Allen Bolt Ø1/4" x 38mm	8 PCS


Step 7

Screw Center Support Legs (G) onto Center Rail Support (J). Support leg heights can be adjusted by screwing (shortening) or unscrewing (raising) the leveler.

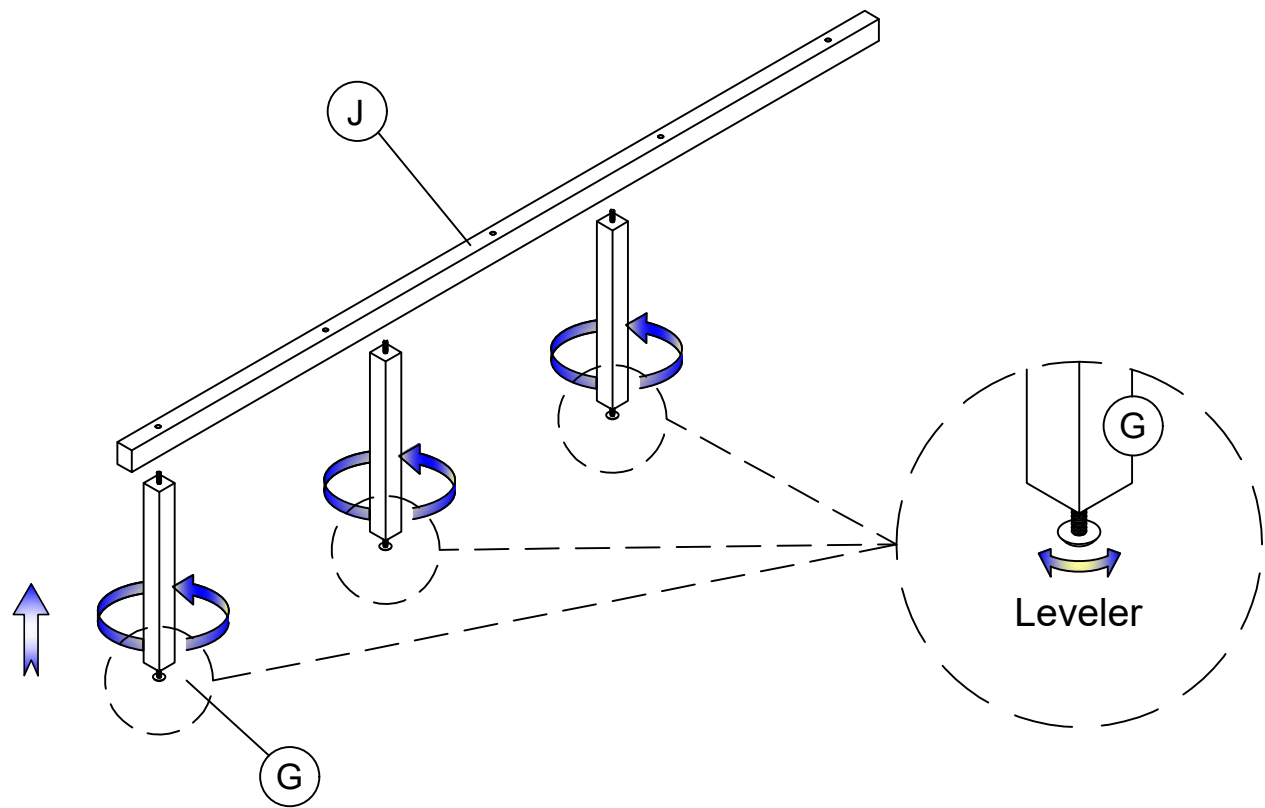

Step 8


Attach Center Rail Support (F) to Headboard (A), Secure Slats using screws (H6). And attach Center Rail Support (F) to Drawer Frame (J), Secure Slats using screws (H18).

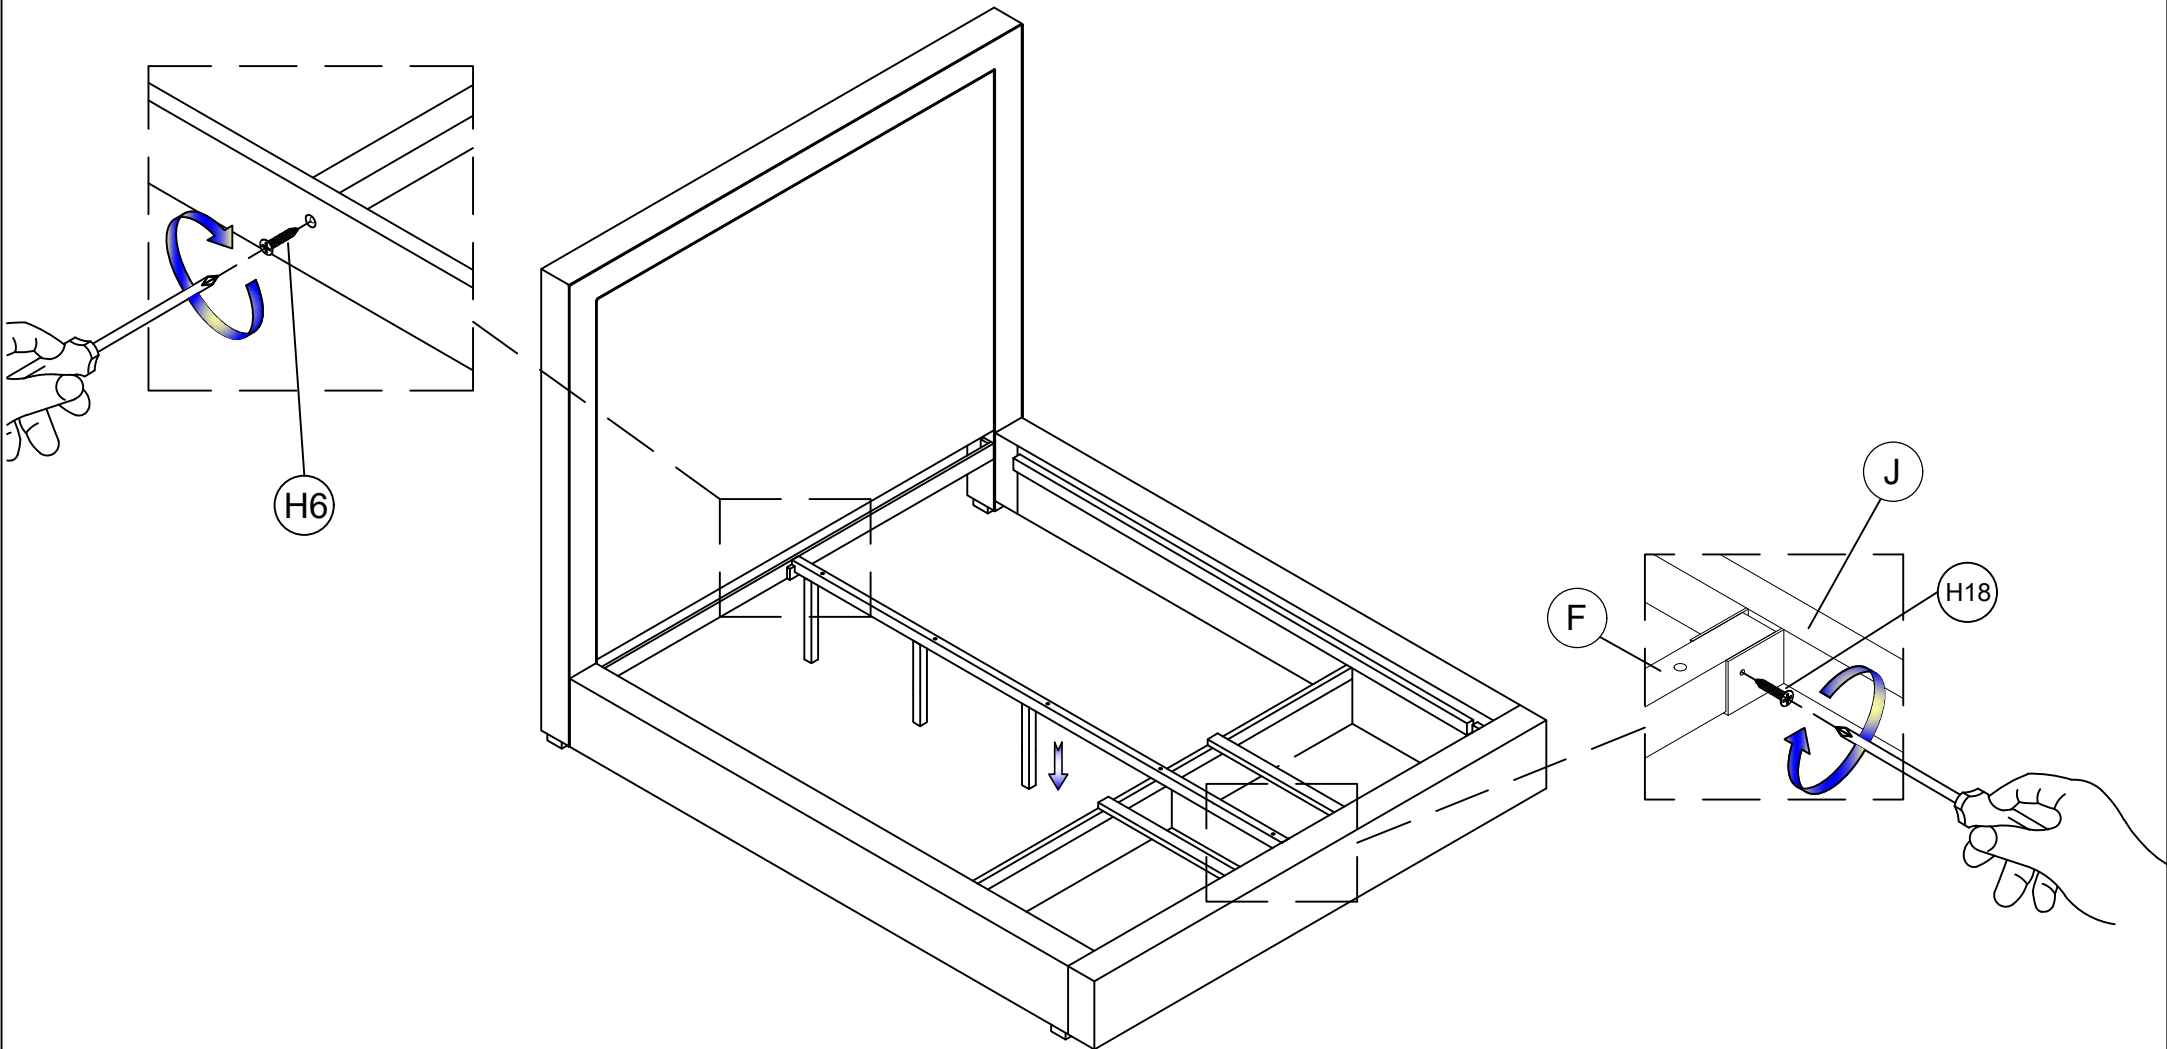

H6		Screw #4 x 30mm	1 PC
H18		Screw #4 x 20mm	2 PCS


Step 9

Open rolled Slats (C) and place on Bed.

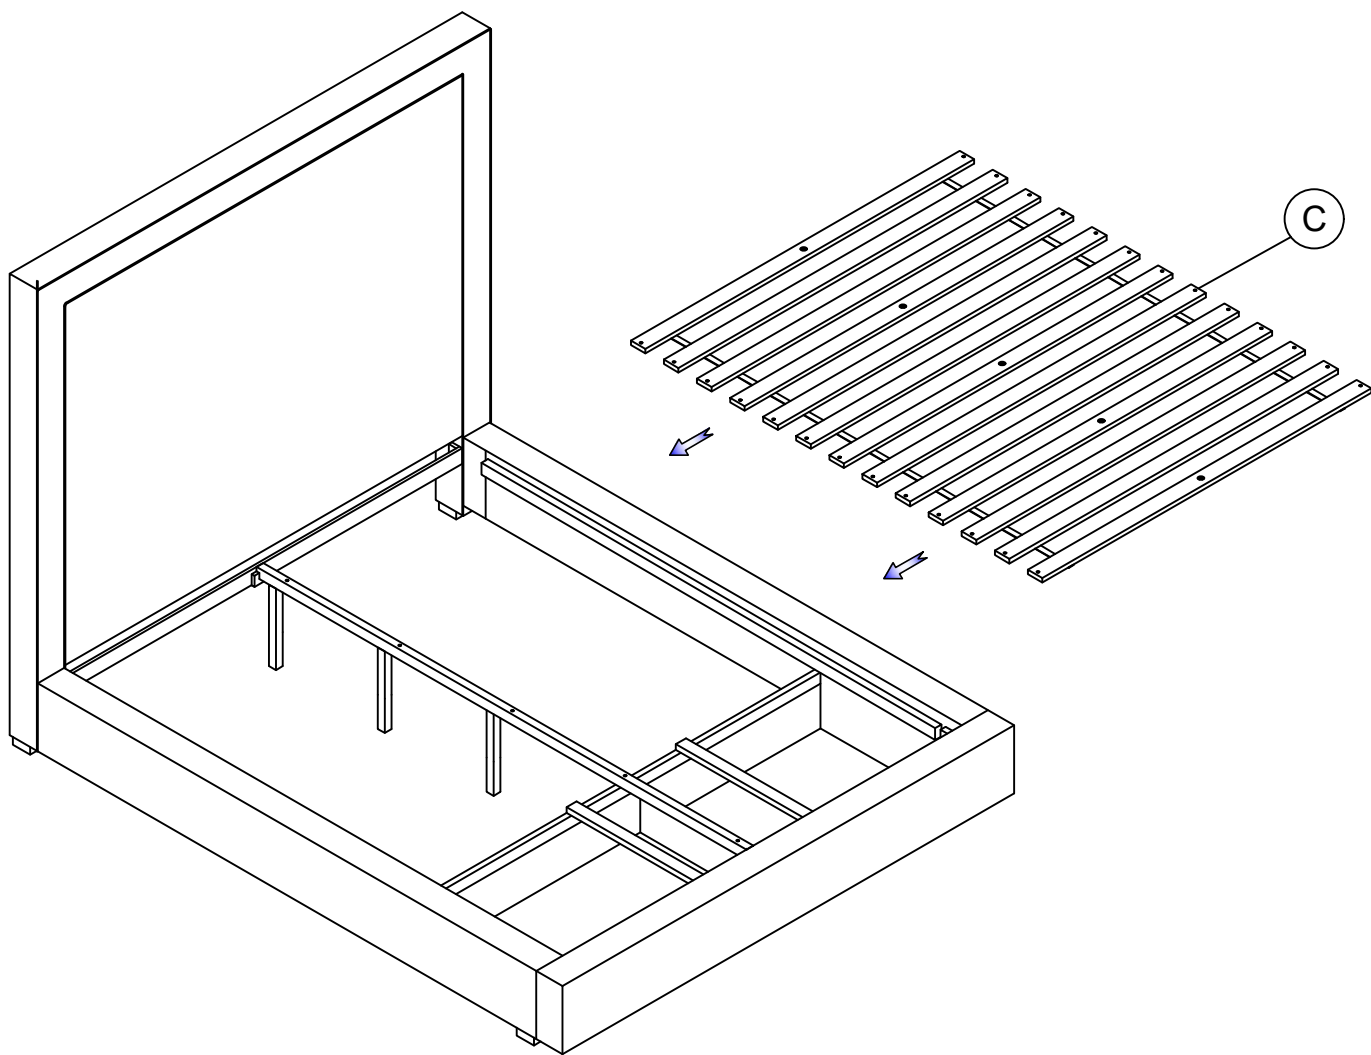

Step 10

Attach Slat Roll (C) to Center Rail Support (F), using Flat Washer (H9) , Spring Washer (H8) and Bolt (H7) , tighten with Allen key (H4). And secure Slats using screws (H6).

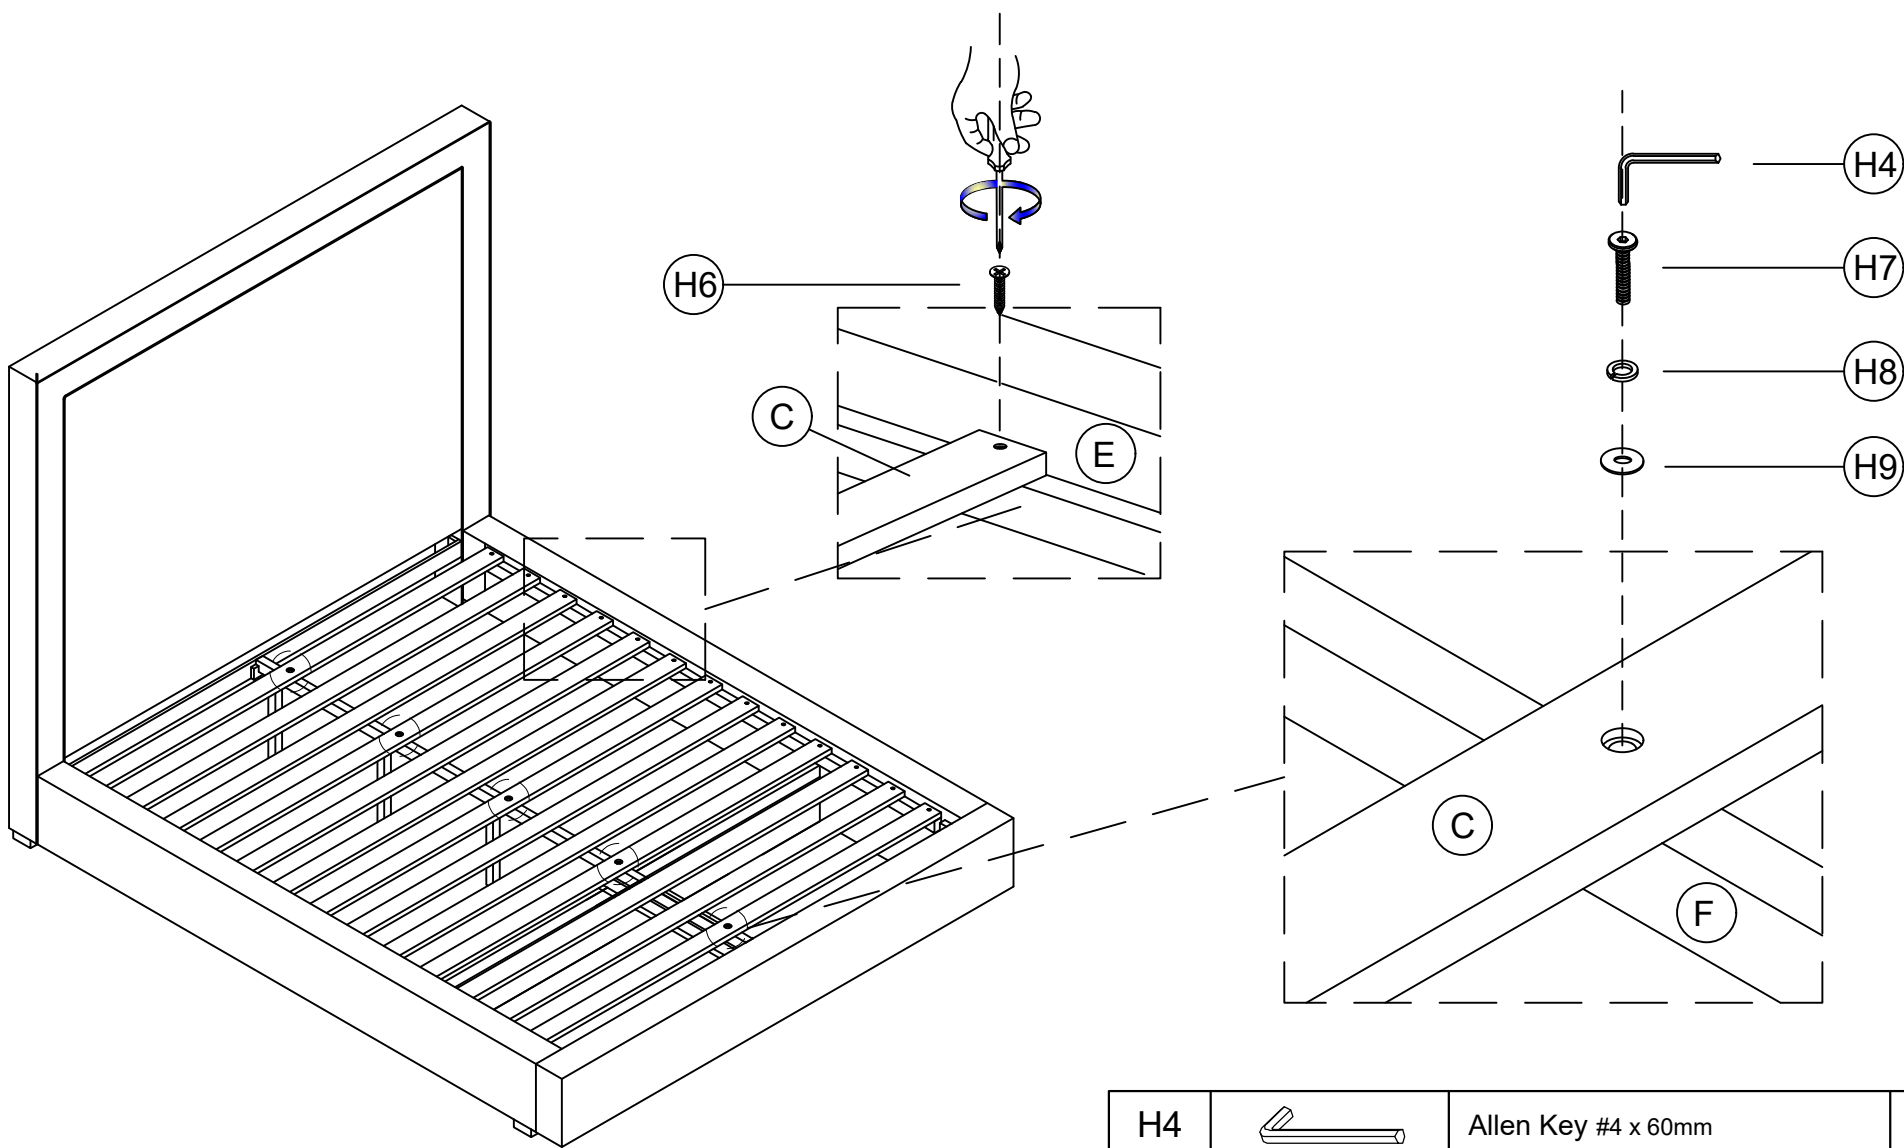

H4		Allen Key #4 x 60mm	1 PC
H6		Screw #4 x 30mm	26 PCS
H7		Allen Bolt Ø1/4" x 32mm	5 PCS
H8		Spring Washer Ø1/4"	5 PCS
H9		Flat Washer Ø1/4" x 19mm	5 PCS