


Assembly Instructions

Bruno Glider Recliner

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Manual Glider Recliner

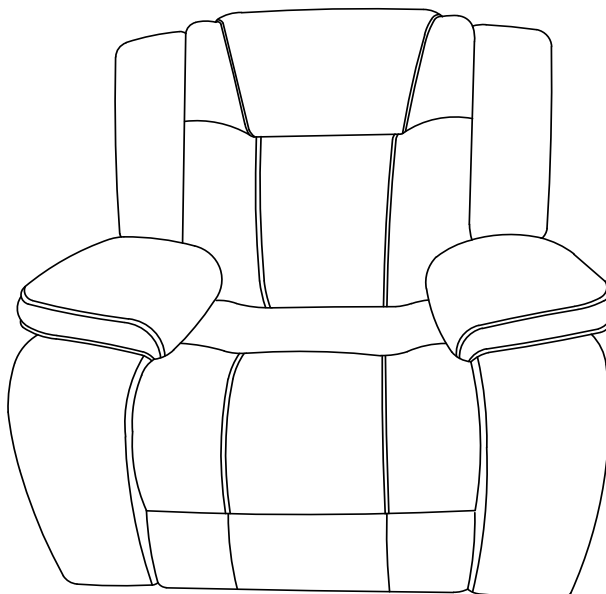


Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

No	Description	Sketch	Qty
A	Body		1 PC
B	Back Cushion		1 PC
C	LAF Armrest Cushion		1 PC
D	RAF Armrest Cushion		1 PC
E	LAF Wing		1 PC
F	RAF Wing		1 PC
G	nuts		4 PCS
H	Screws		4 PCS


Step 1

1. Check the bottom of the Body (A) to cut and remove any fastener that is holding the mechanism in place during transportation.
2. Take out the LAF Armrest Cushion (C) and RAF Armrest Cushion (D) from the bottom of the armrest.
3. Remove the hardware accessory package from underneath the body (A).

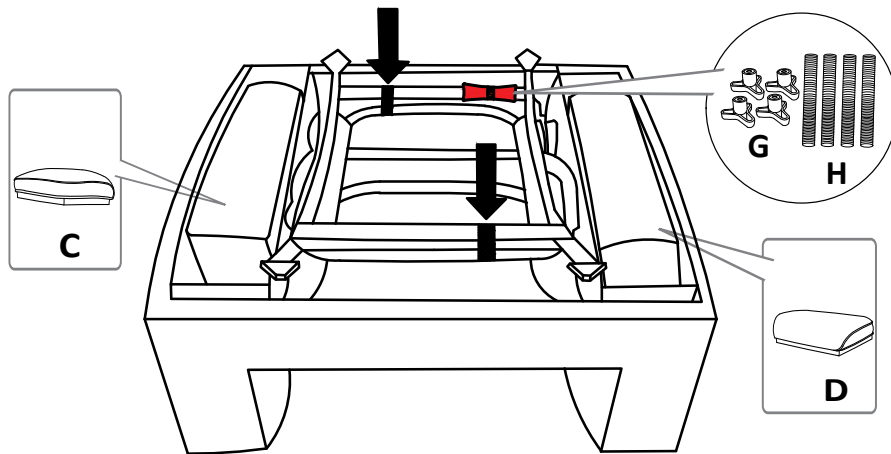


Step 2

Insert the screws (H) into the threaded holes on the armrest cushions (C, D), align them properly, and turn the screws clockwise until approximately one-third of each screw is inserted.

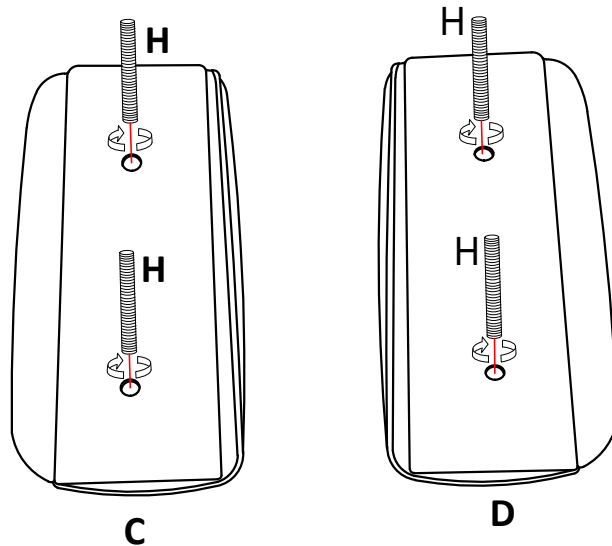


Step 3

Place the armrest cushions (C, D) onto the armrest frames of the seat body (A), ensuring that the screws are aligned with the pre-drilled holes. Once properly positioned, hold the cushions in place and carefully turn the seat body upside down for easier access. From underneath the seat body, attach the nuts to the screws on both sides of the armrests. Tighten the nuts clockwise until the armrest cushions are securely fastened.

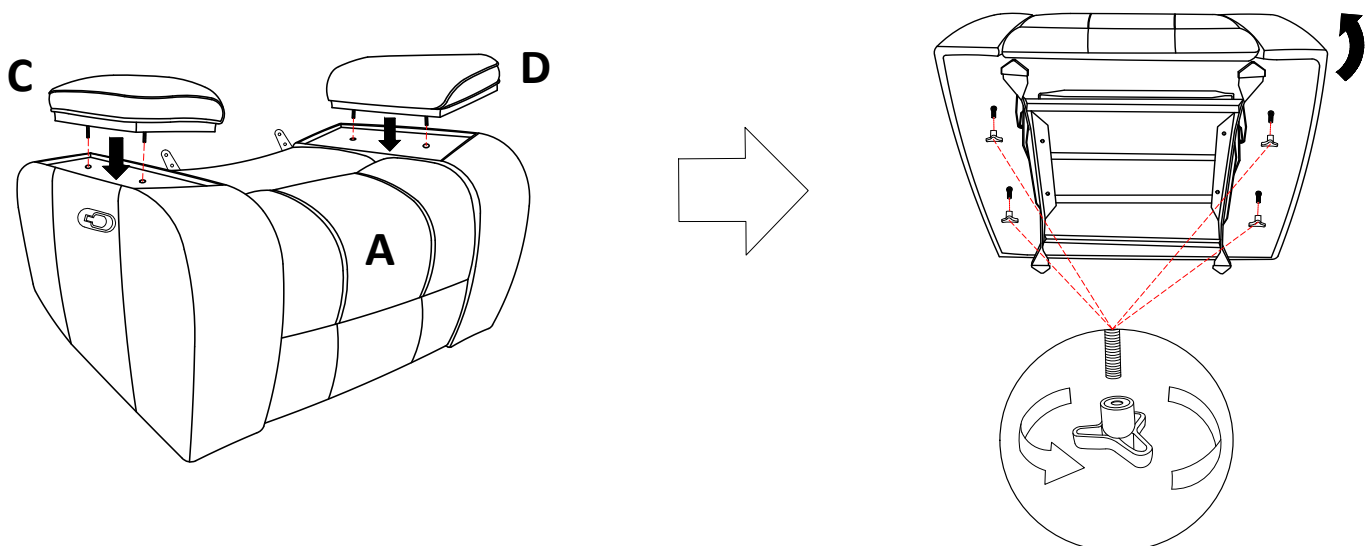


Step 4

Install the back cushion (B) into the body (A) by positioning the female metal receiver brackets over the male metal posts. Ensure that the female metal receives brackets on each side line up with the seat metal posts. Push the backrest down until each side is locked into place and an audible "click" is heard;

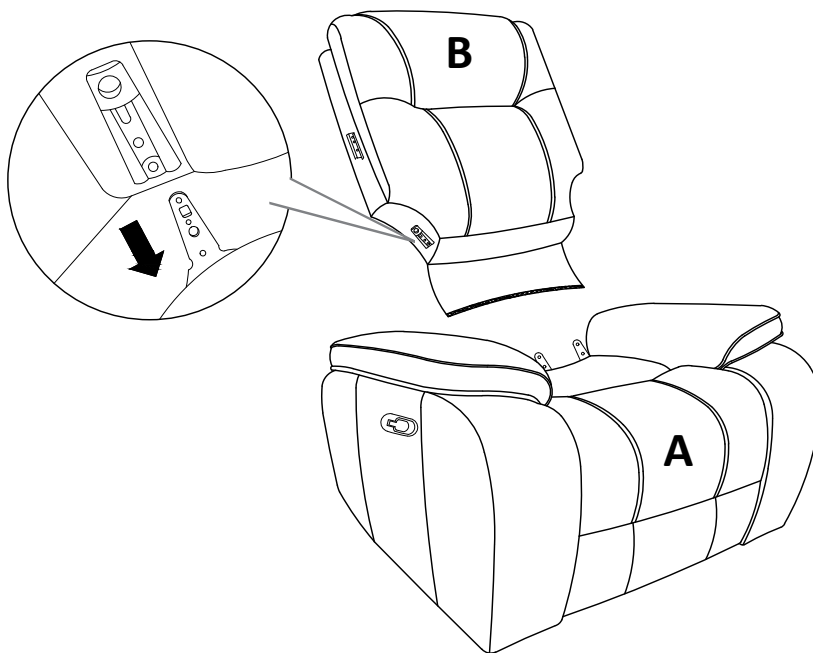


Step 5

Install the LAF Wing (E) and RAF Wing (F) by sliding wings in a downward motion along the side of the seat back to connect the brackets.

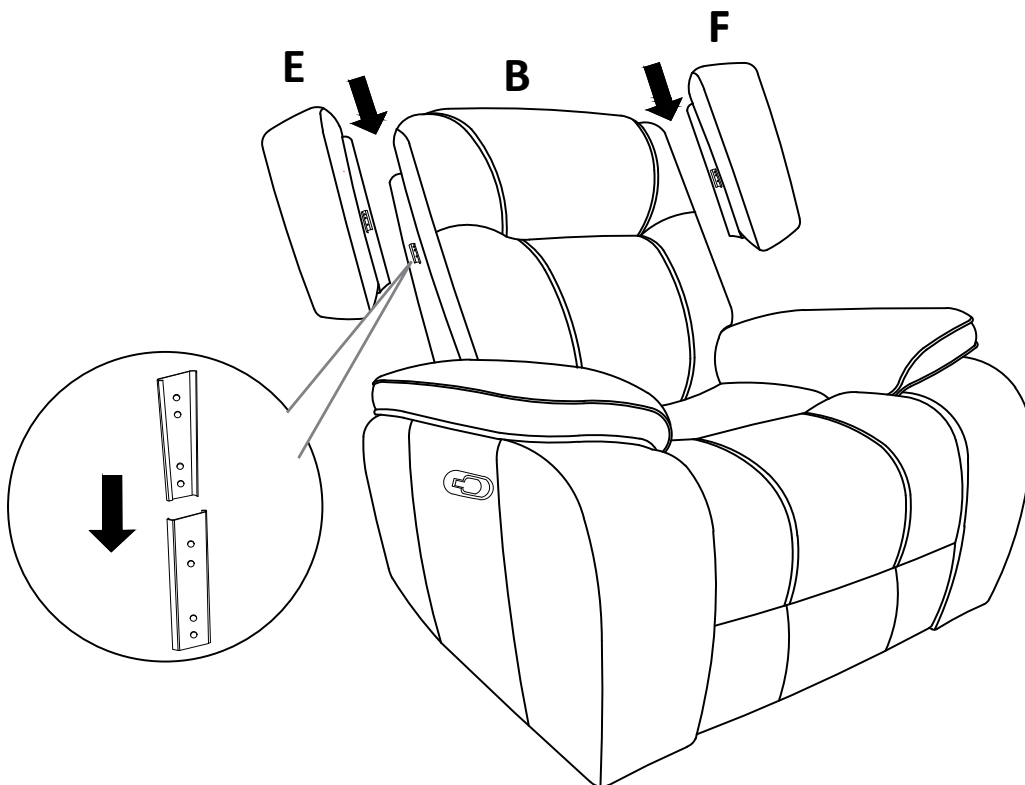

Step 6

Attach the flap to the seat frame by pulling the flap down, and pressing the bottom under the seat base, connecting the velcro.

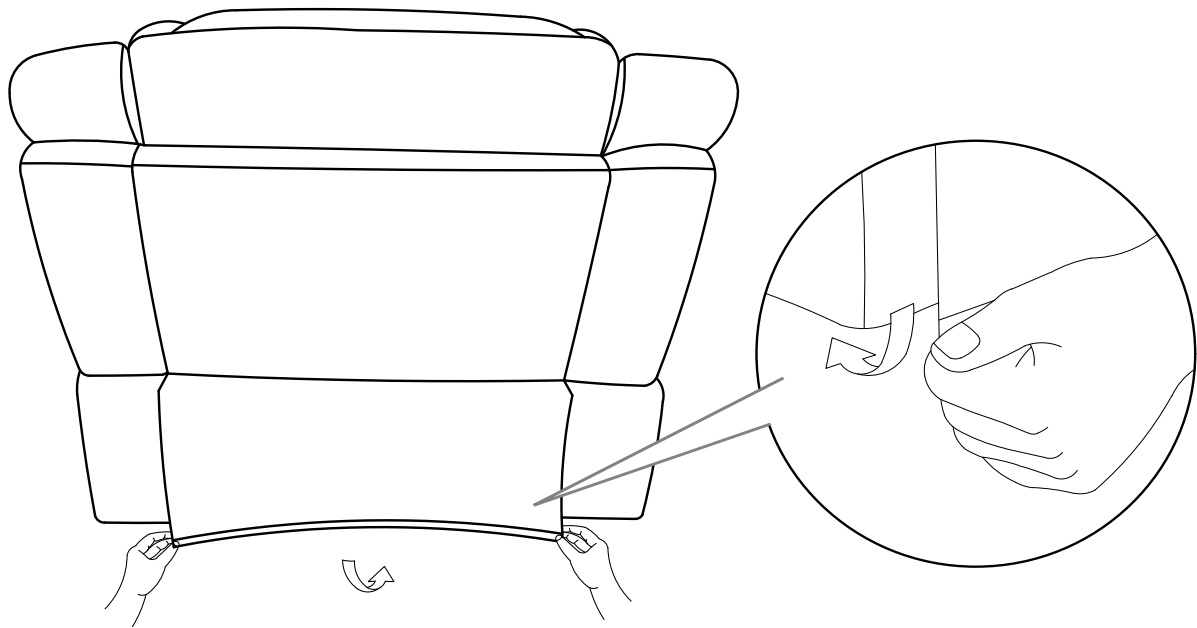

Function Display

