

ITEM CODE CCB#80


ASSEMBLY INSTRUCTIONS

PARTS INCLUDED

1. 2 IRON LEGS
2. 7 SCREWS AND WASHER
3. 1 ALLEN KEY



1. Place the cabinet upside down (on a protective matt).
2. Attach the iron legs to the base of the cabinetop 1 by 1 as per the picture & tighten the screws with the help of allen key,

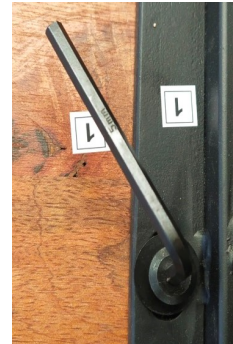

3. After attaching both legs make sure they are fixed firmly and not shaking.



4. Overturn the cabinet carefully.

