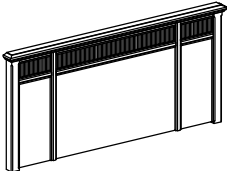










Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


Hardware and Parts packed with the Headboard

Queen Panel Headboard - 25073  H-A 1 pc	Headboard Post (Left)  H-B 1 pc	Headboard Post (Right)  H-C 1 pc	Headboard Stretcher  H-D 1 pc		
Allen Head Bolt M6-32 x 40mm  H-E 2 pcs	Flat Washer Ø6 x Ø13mm  H-F 2 pcs	Lock Washer Ø9 x Ø13mm  H-G 8 pcs	Allen Head Bolt M8-32 x 50mm  H-H 6 pcs	Flat Washer Ø8 x Ø20mm  H-I 6 pcs	Allen Key 4 x 110mm  H-J 1 pc

Hardware and Parts packed with the Footboard

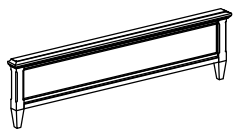Queen Upholstered Footboard - 25074  (F-A) 1 pc	Wood Slat (61" long)  (F-B) 1 set	Support leg (7-3/4" x 1-1/4" x 1-1/4")  (F-C) 5 pcs	Wood Screw Ø4 x 25mm  (F-D) 10 pcs	Tool Required (not provided) Phillips Screwdriver 
--	---	---	--	--

Hardware and Parts packed with the Bed Rails

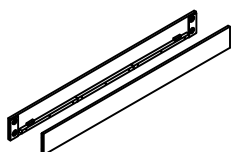
Bed Rails - 25072  (R-A) 2 pcs	Thread Bolt M8-32 x 70mm  (R-B) 8 pcs	Arc Washer 14 x 26mm  (R-C) 8 pcs	Lock Washer Ø10 x Ø15mm  (R-D) 8 pcs	Hex Nut M8-32 x 7mm  (R-E) 8 pcs	Open Wrench 13 mm  (R-F) 1 pc
--	---	---	--	--	---

5/0 Queen Bed

25073 - 5/0 Upholstered Headboard

25074 - 5/0 Upholstered Footboard


25072 - 5/0-6/6 Queen-King Bed Rails

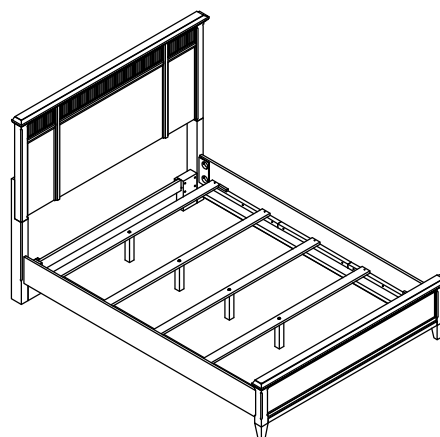


STEP 1

5/0 Queen Bed


25073 - 5/0 Upholstered Headboard

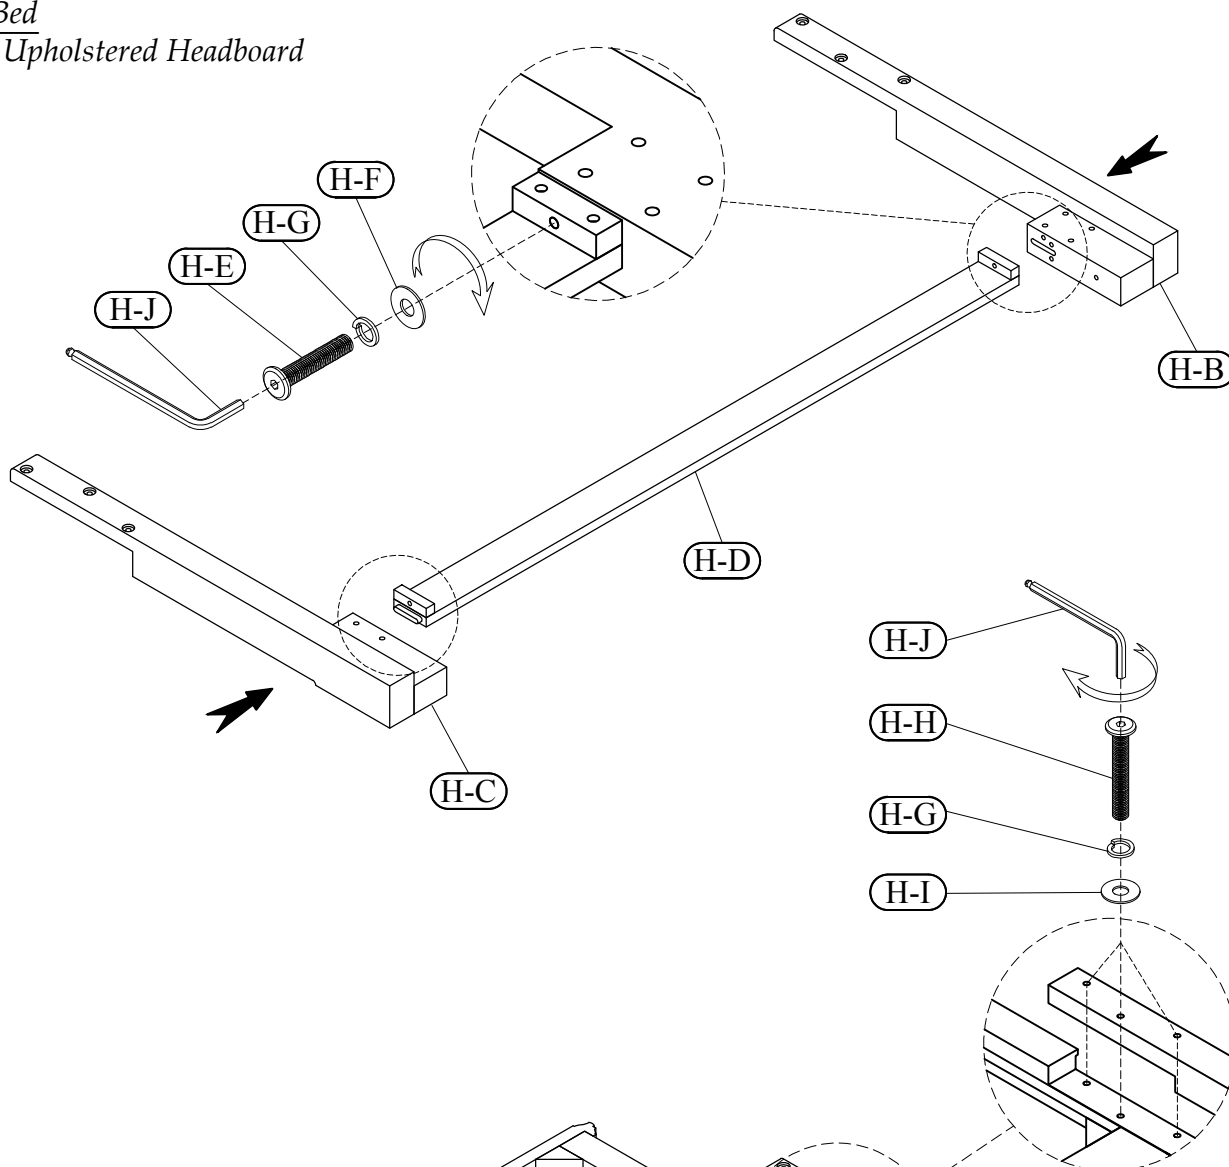


STEP 2

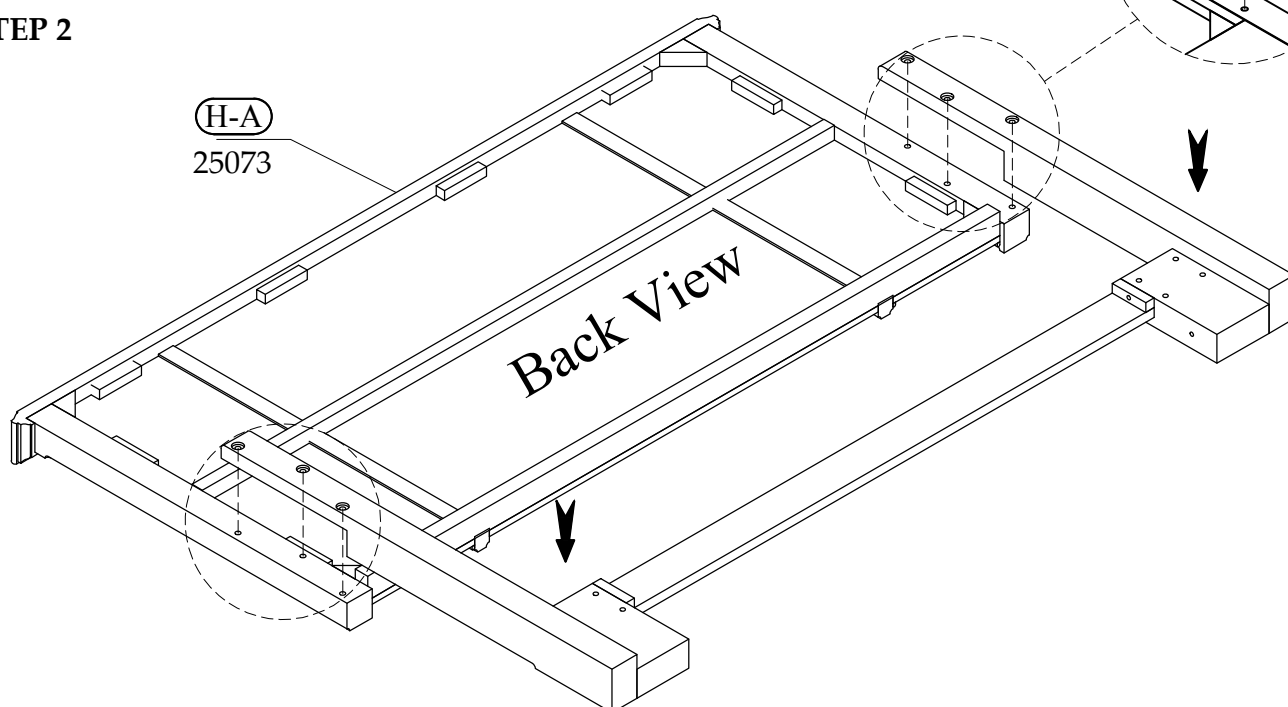


STEP 3

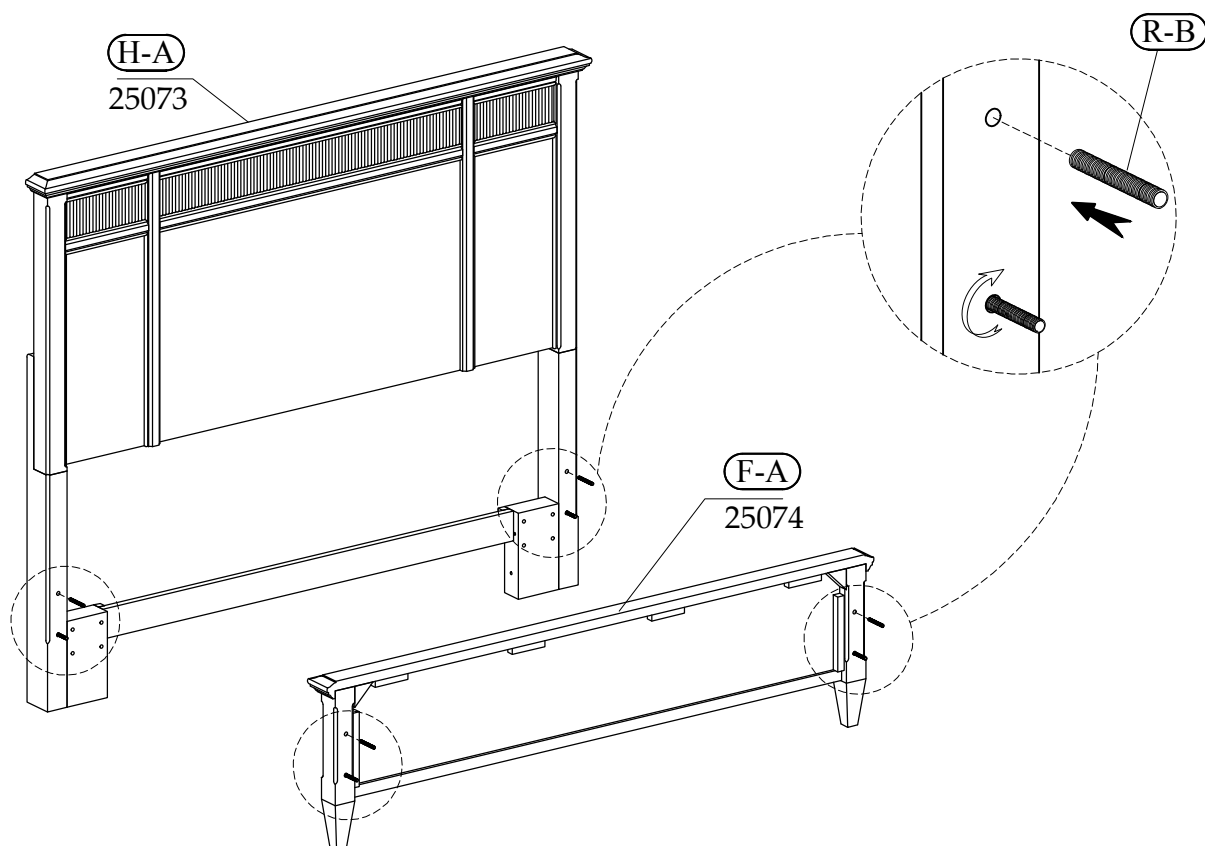


STEP 4

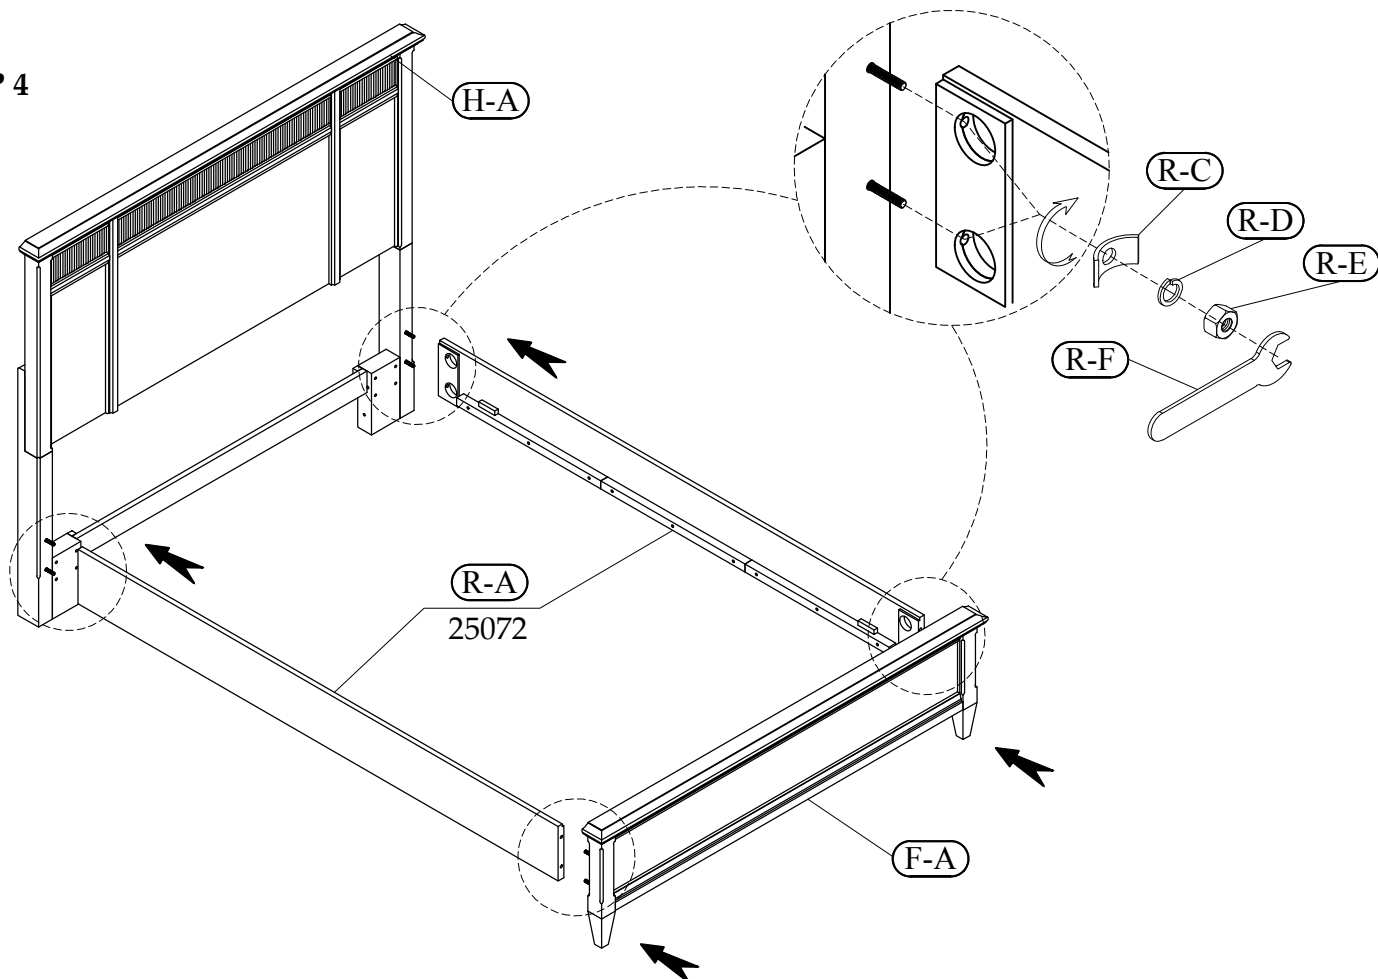

STEP 5

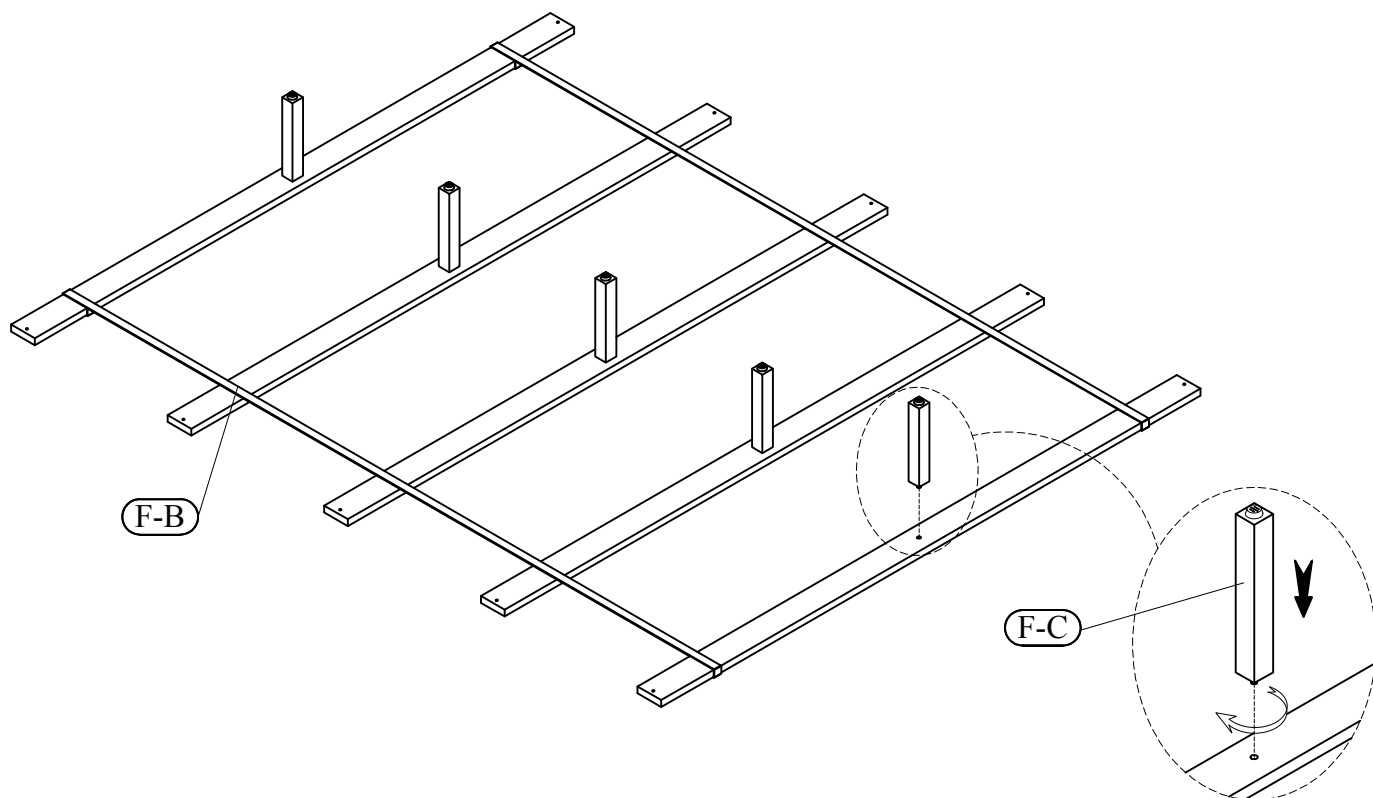


STEP 6

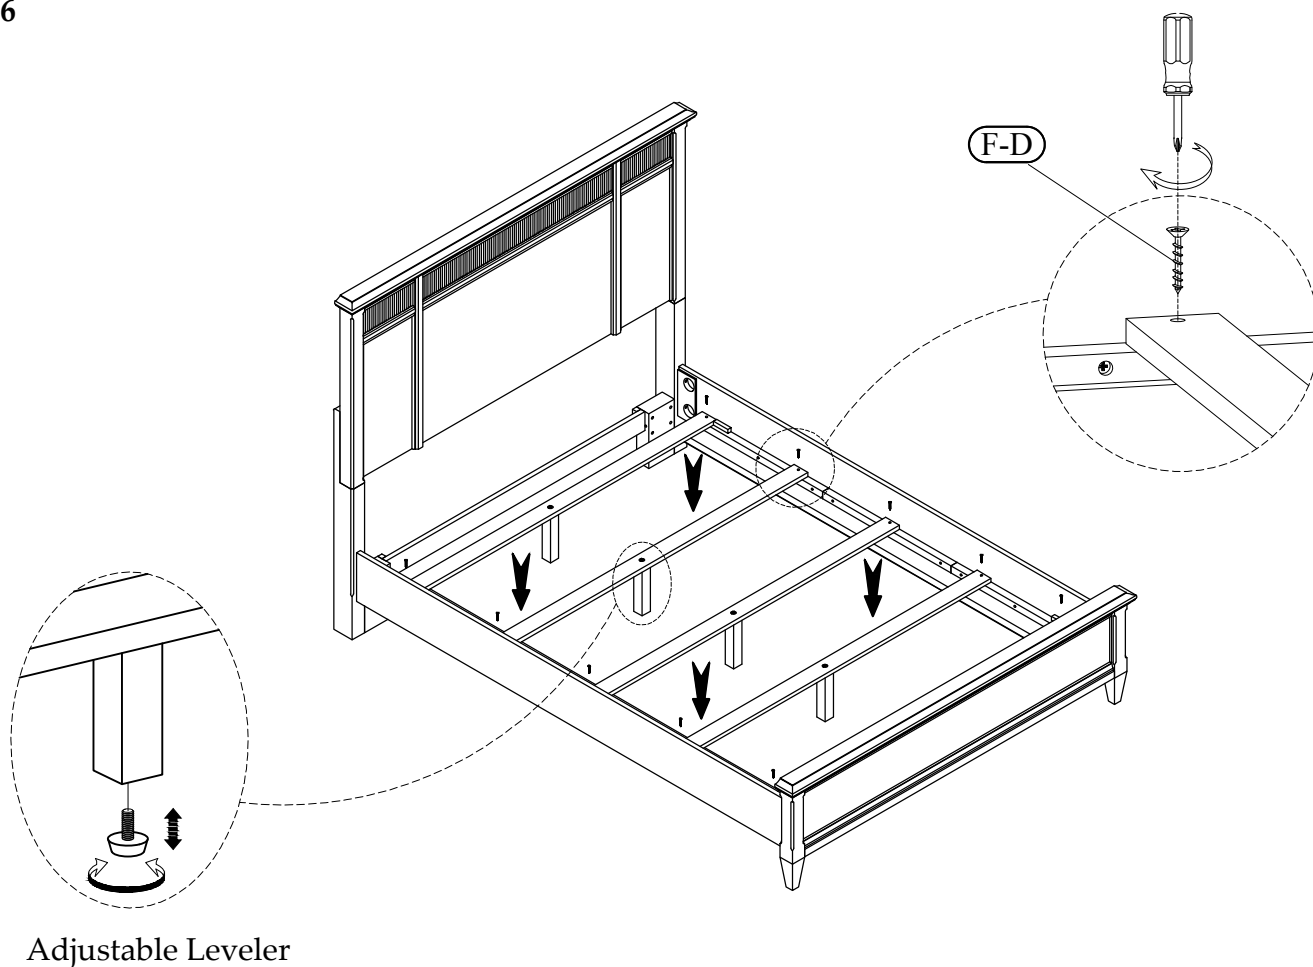

5/0 Queen Bed

25073 - 5/0 Upholstered Headboard

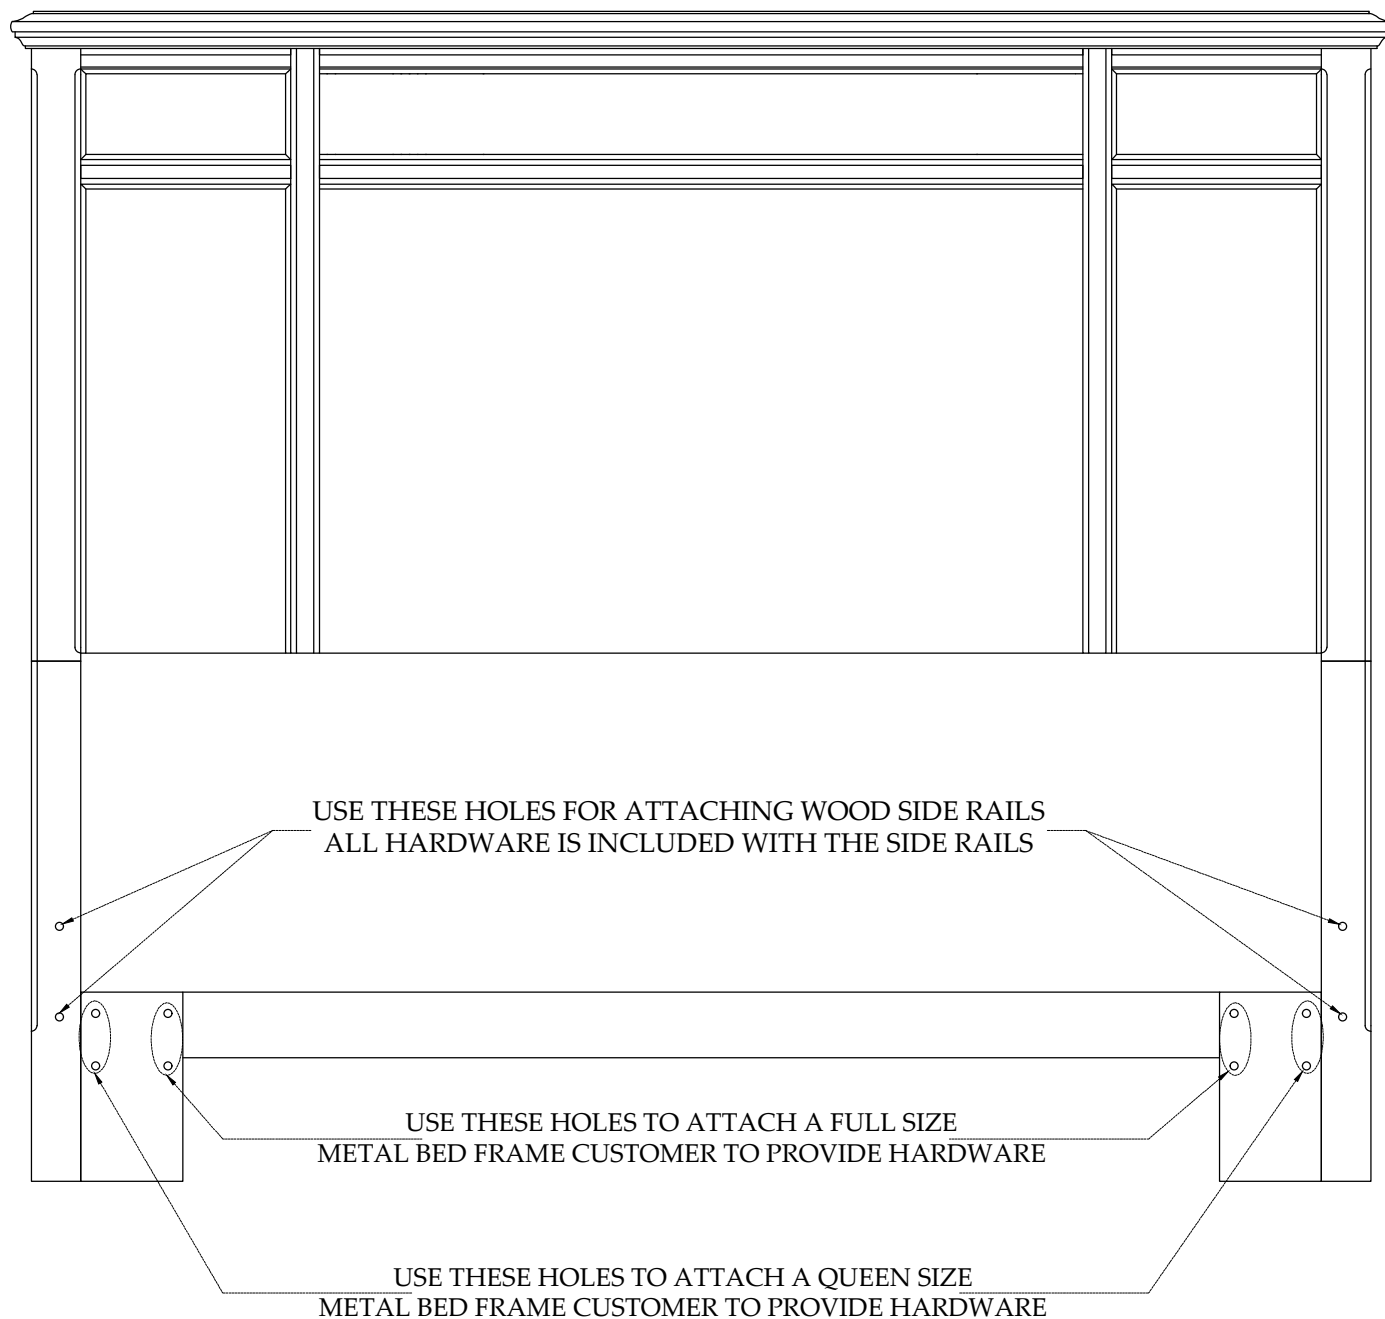

The headboard may be used alone with a Queen size metal bed frame