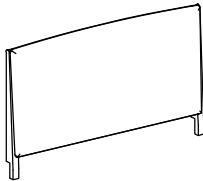









Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


Hardware and Parts packed with the Headboard

King Upholstered Headboard - 25080  H-A 1 pc	Headboard Post (Left)  H-B 1 pc	Headboard Post (Right)  H-C 1 pc	Headboard Stretcher  H-D 1 pc		
Allen Head Bolt M6-32 x 40mm  H-E 2 pcs	Flat Washer Ø6 x Ø13mm  H-F 2 pcs	Lock Washer Ø9 x Ø13mm  H-G 8 pcs	Allen Head Bolt M8-32 x 60mm  H-H 6 pcs	Flat Washer Ø8 x Ø20mm  H-I 6 pcs	Allen Key 4 x 110mm  H-J 1 pc

Hardware and Parts packed with the Footboard

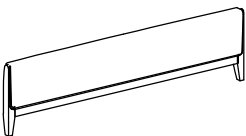King Upholstered Footboard - 25081 	Wood Slat (77" long) 	Support leg (7-3/4" x 1-1/4" x 1-1/4") 	Wood Screw Ø4 x 25mm 	Tool Required (not provided) Phillips Screwdriver 
(F-A) 1 pc	(F-B) 1 set	(F-C) 10 pcs	(F-D) 10 pcs	

Hardware and Parts packed with the Bed Rails

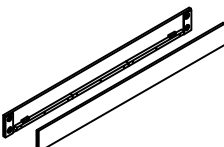
Bed Rails - 25072 	Thread Bolt M8-32 x 70mm 	Arc Washer 14 x 26mm 	Lock Washer Ø10 x Ø15mm 	Hex Nut M8-32 x 7mm 	Open Wrench 13 mm 
(R-A) 2 pcs	(R-B) 8 pcs	(R-C) 8 pcs	(R-D) 8 pcs	(R-E) 8 pcs	(R-F) 1 pc

6/6 King Bed

25080 - 6/6 Upholstered Headboard


25081 - 6/6 Upholstered Footboard

25072 - 5/0-6/6 Queen-King Bed Rails

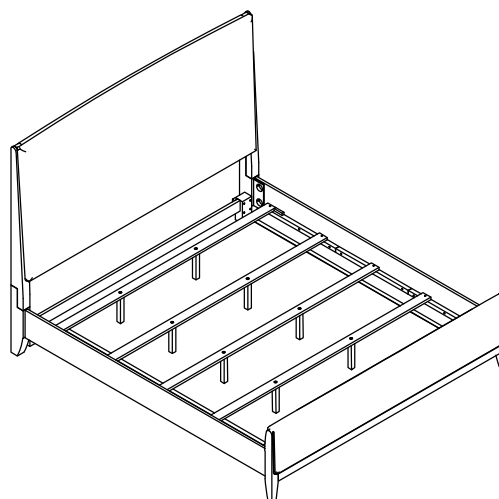

STEP 1


*6/6 King Bed
25080 - 6/6 Upholstered Headboard*

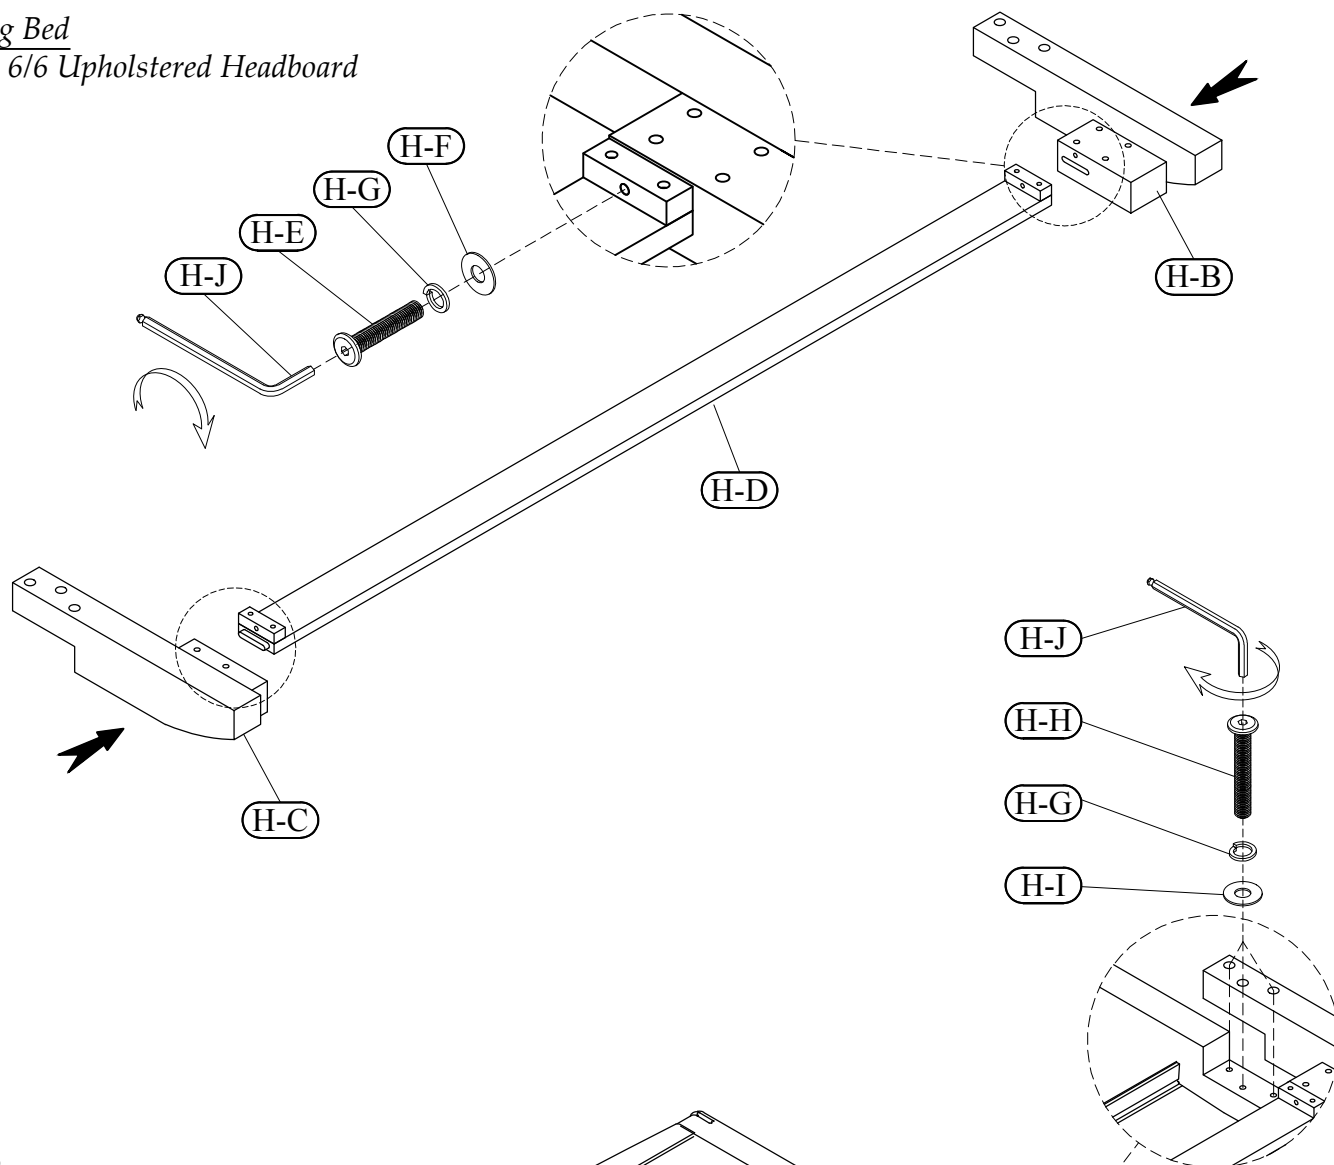


STEP 2

(H-A)
25080


Back View

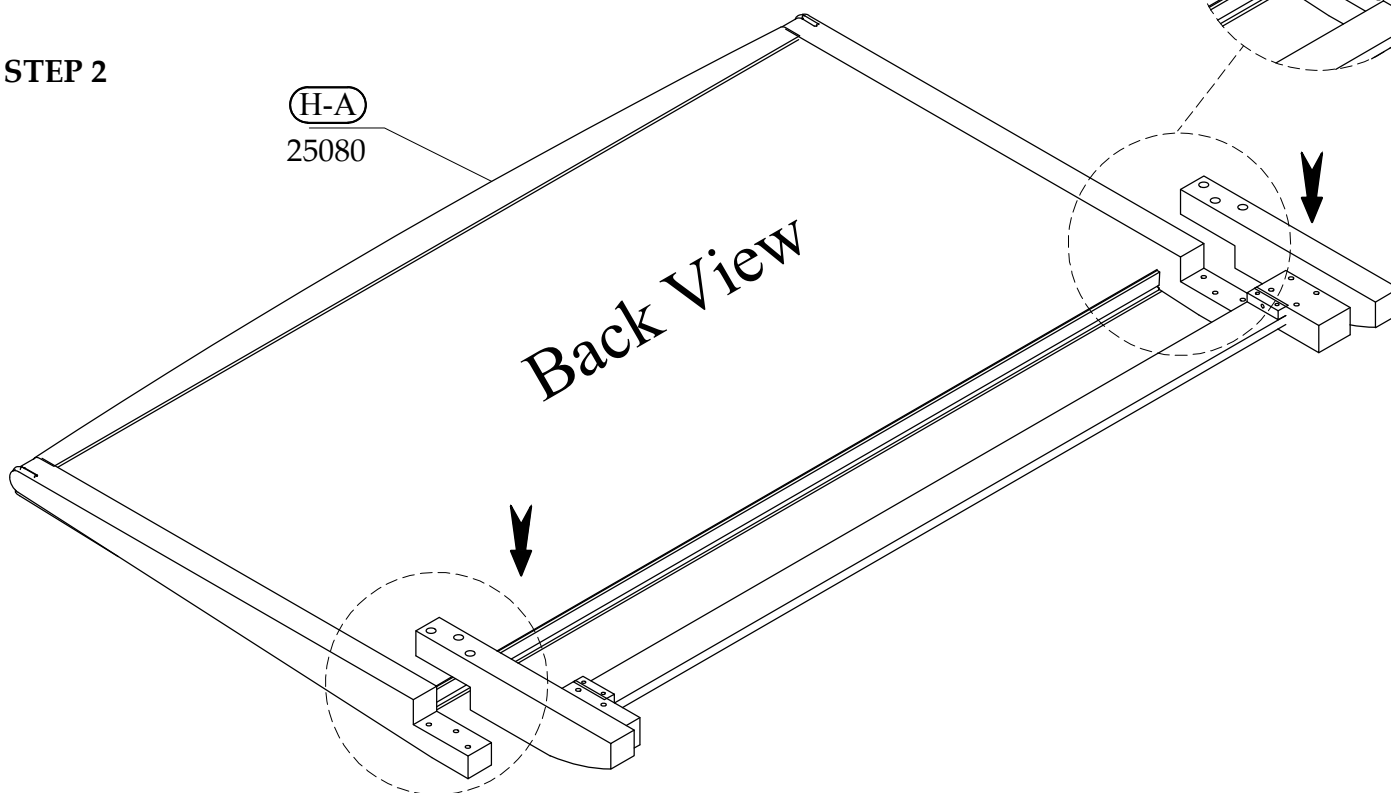


STEP 3

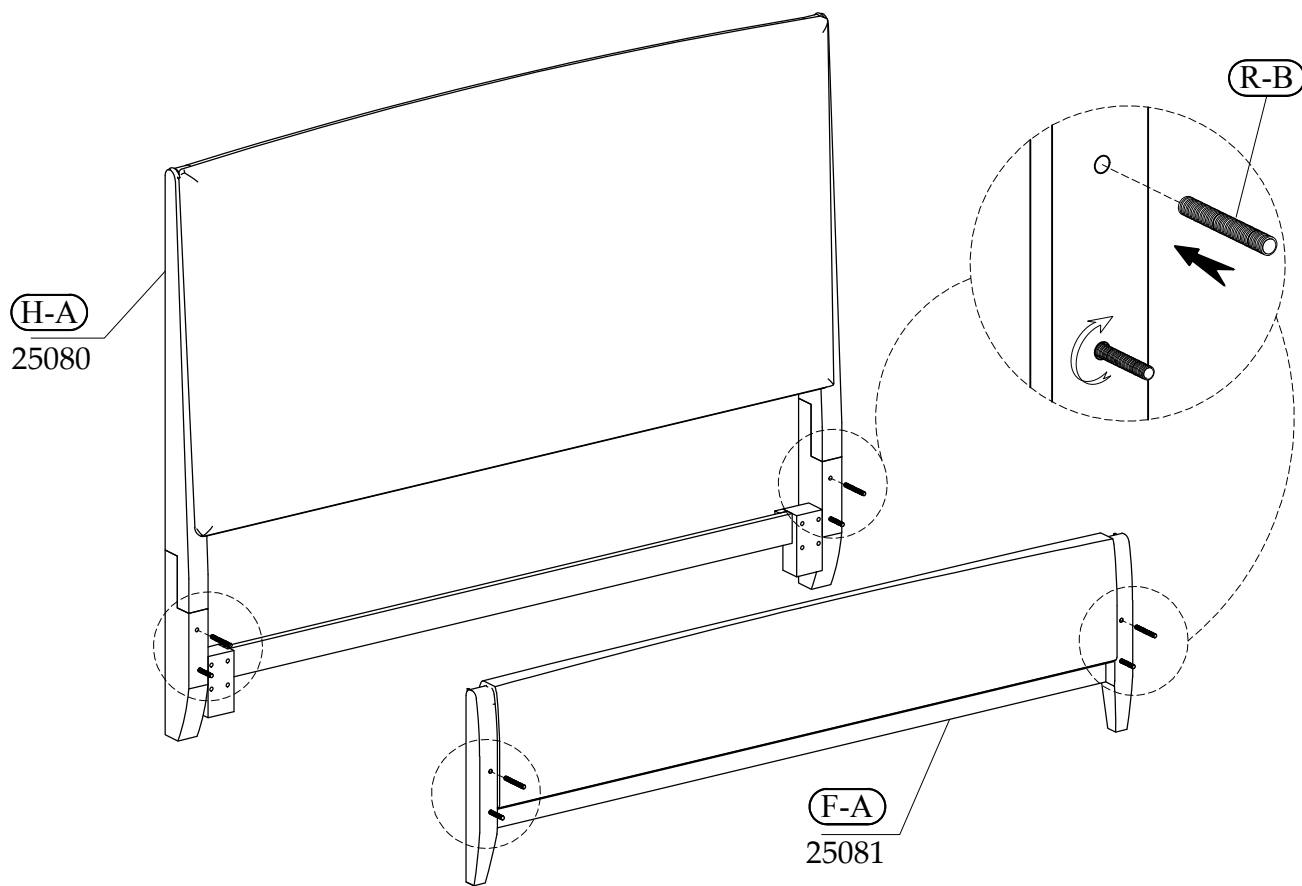


STEP 4

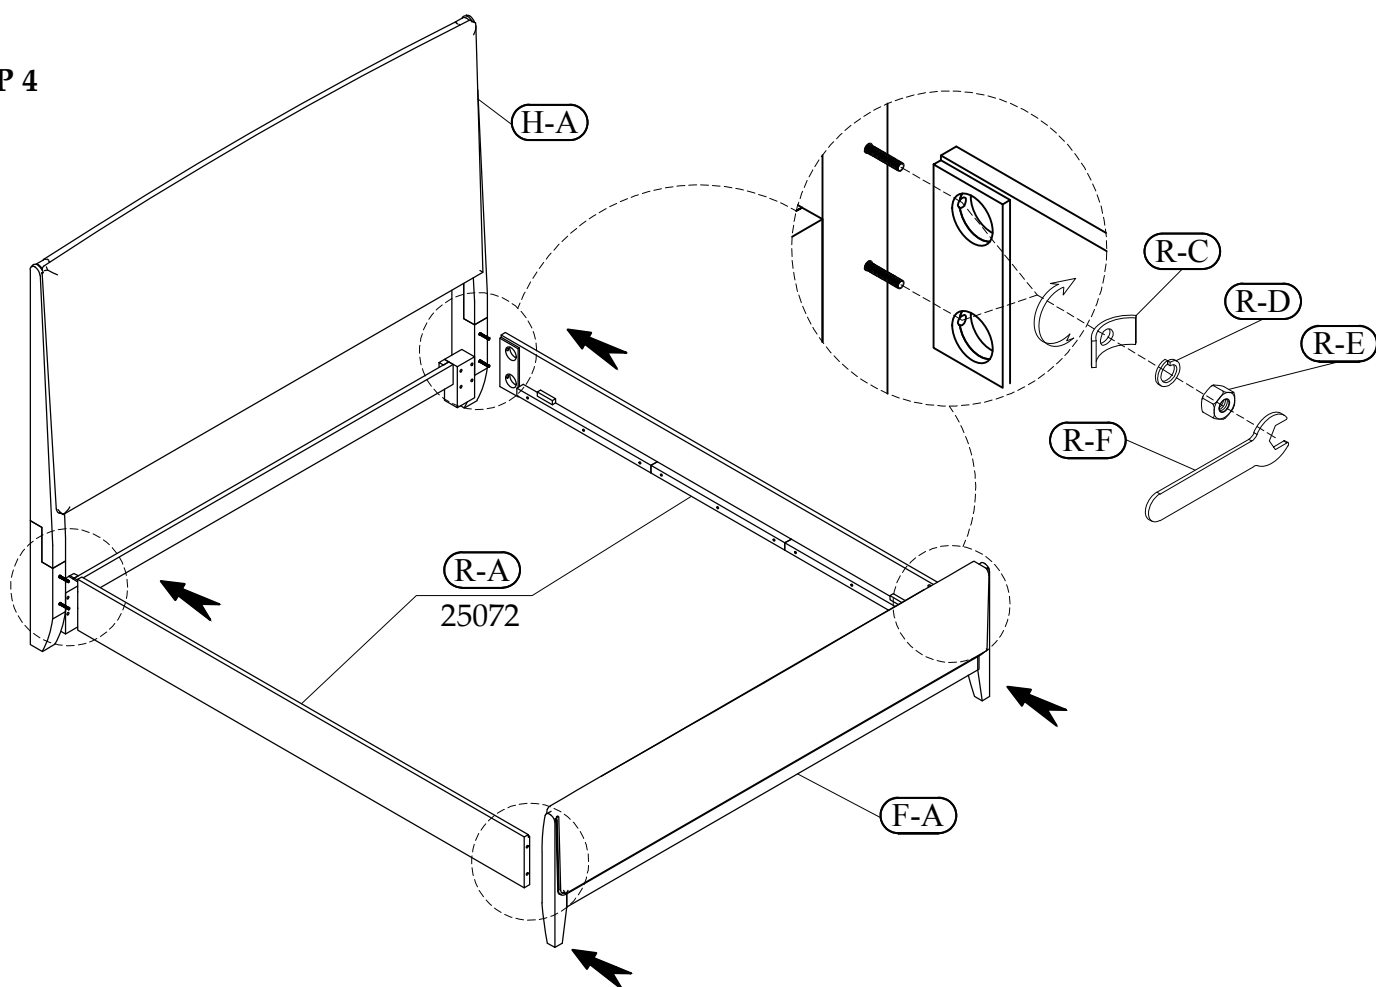

STEP 5

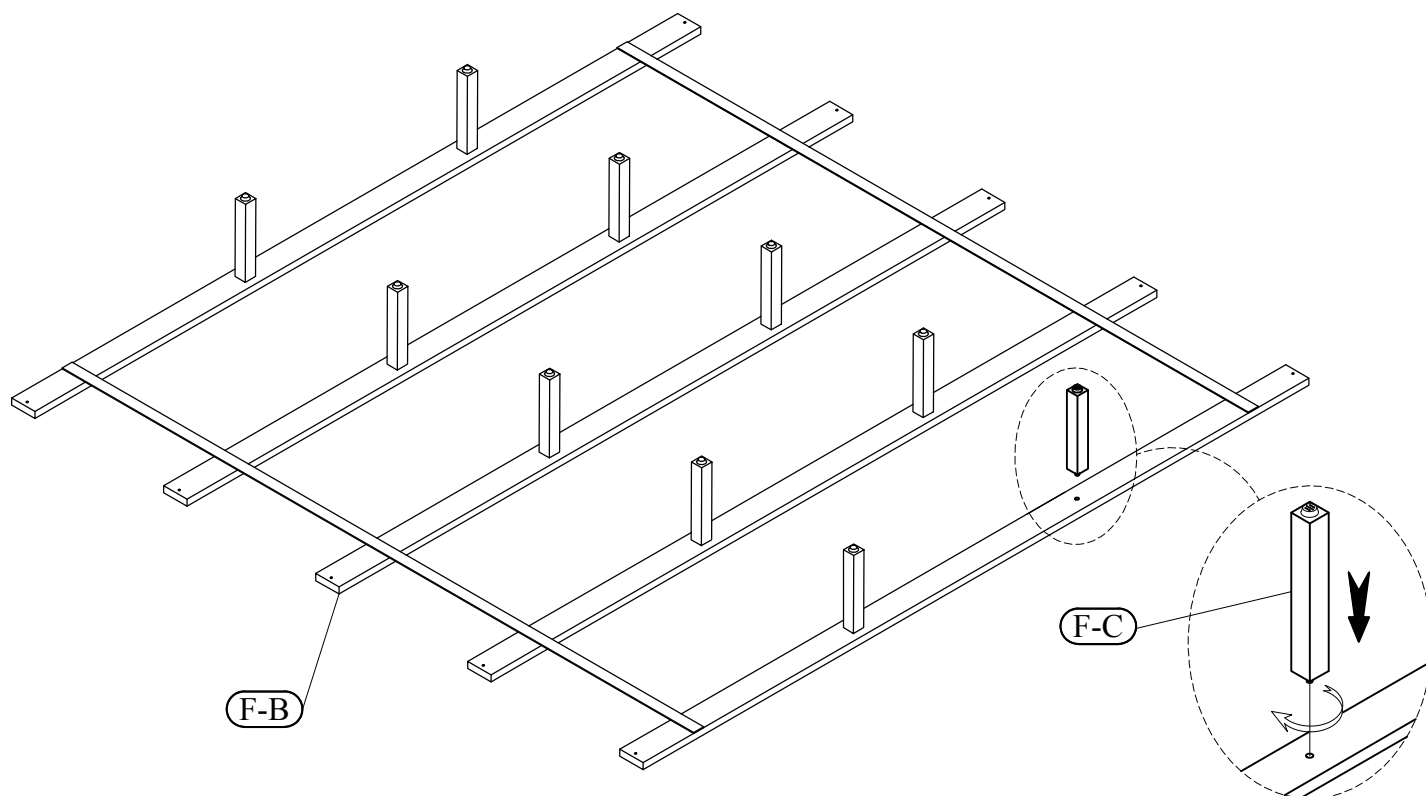


STEP 6

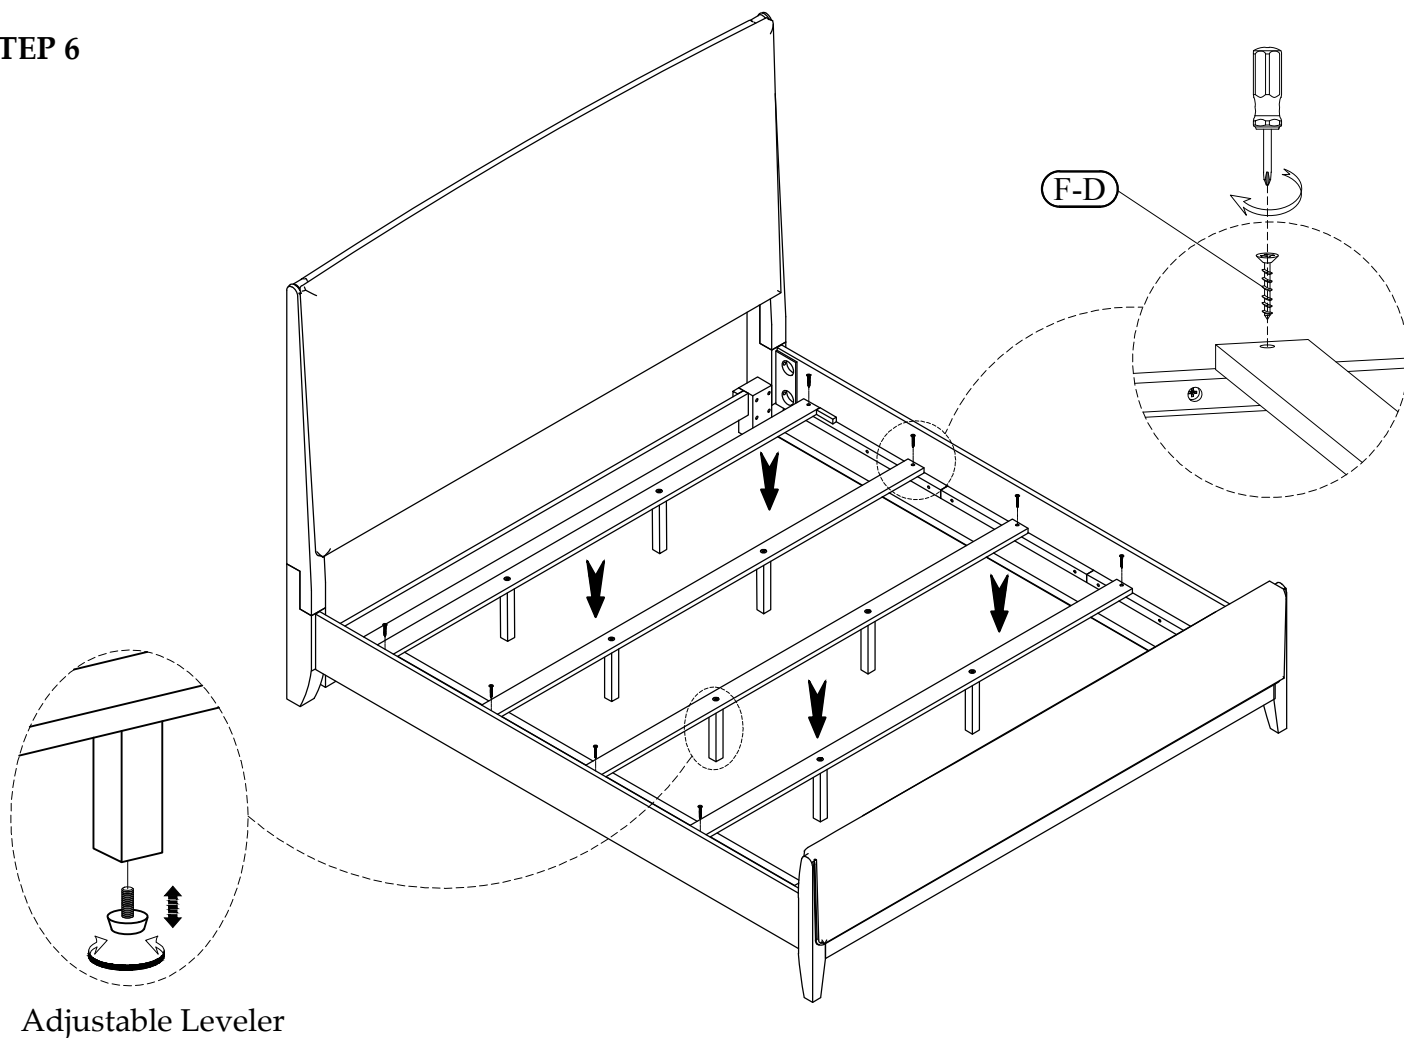

6/6 King Bed

25080 - 6/6 Upholstered Headboard

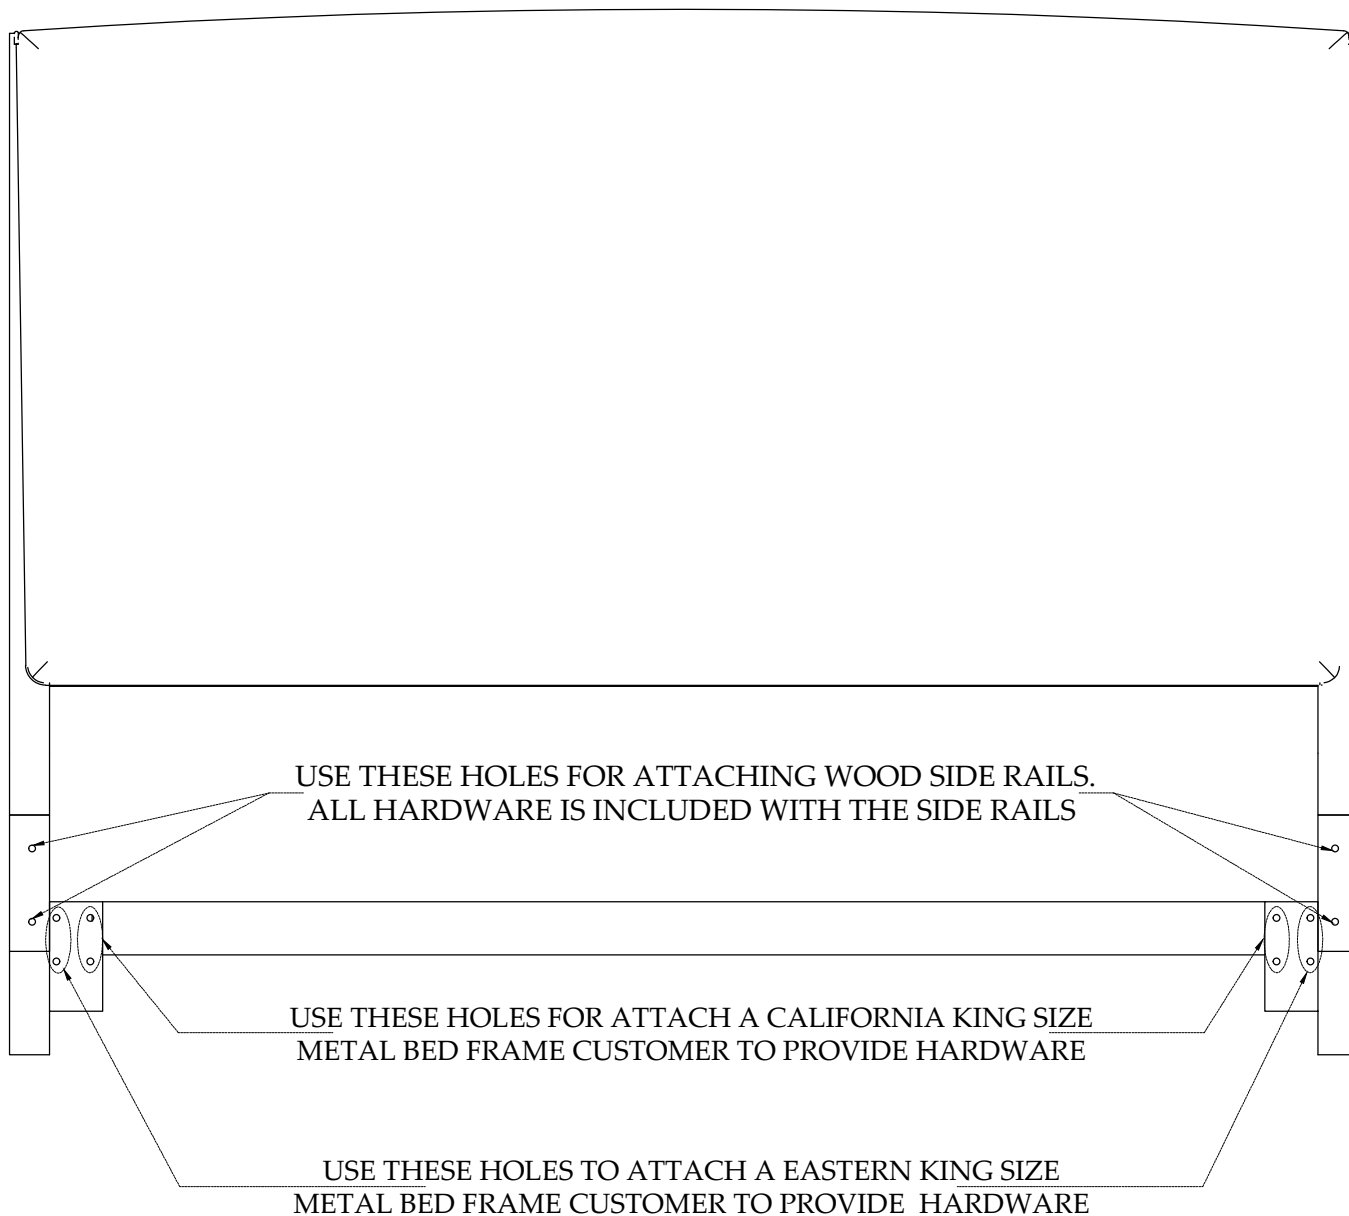

The headboard may be used alone with a Eastern King or California King size metal bed frame