
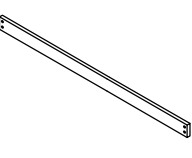






Warning :

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.






Hardware and Parts packed with the Headboard

79280 King Panel Headboard  (H-A) 1 pc.	Headboard Post (Left)  (H-B) 1 pc.	Headboard Post (Right)  (H-C) 1 pc.	Headboard Stretcher  (H-D) 1 pc.
Allen Head Bolt ø5/16"-18 x 1-3/4"  (H-E) 10 pcs.	Spring Washer ø5/16"  (H-F) 10 pcs.	Flat Washer ø5/16" x 19*2mm  (H-G) 10 pcs.	Allen Key 5mm  (H-H) 1 pc.







Hardware and Parts packed with the Footboard

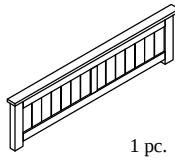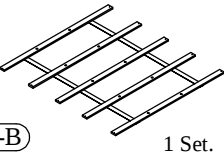79281 King Panel Footboard  (F-A1) 1 pc.	Wood Slat 77" long  (F-B) 1 Set.	Slat Support Leg 6-3/4" x 1-1/4" x 1-1/4"  (F-C) 10 pcs.	Wood Screw #8 x 1"  (F-D) 10 pcs.	Screw Driver not included 
--	---	---	---	--

Hardware and Parts packed with the Storage Footboard

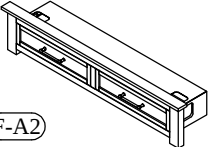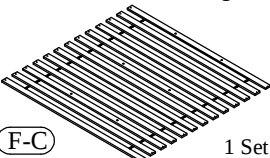79283 King Storage Footboard  (F-A2) 1 pc.	Footboard Support Leg 7-1/4"x 1-1/4" x 1-1/4"  (F-B) 2 pcs.	Wood Slat 77" long  (F-C) 1 Set.	Center Support Rail 61"x 2-3/4" x 3/4"  (F-D) 2 pcs.	Slat Support Leg 12" x 1-1/4" x 1-1/4"  (F-E) 6 pcs.	
Allen Head Bolt ø5/16"-18 x 1-1/2"  (F-F) 4 pcs.	Spring Washer ø5/16"  (F-G) 4 pcs.	Flat Washer ø5/16" x 19*2mm  (F-H) 4 pcs.	Allen Key 5mm  (F-I) 1 pc.	Wood Screw #8 x 1"  (F-J) 26 pcs.	Screw Driver not included 

Hardware and Parts packed with the Bed Rail

79272 Panel Bed Rails  (R-A1) 2 pcs.	All-Thread Bolt ø5/16"-18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer ø5/16"  (R-C) 8 pcs.	Flat Washer ø5/16" x 16*2mm  (R-D) 8 pcs.	Spring Washer ø5/16"  (R-E) 8 pcs.	Hex Nut ø5/16" x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.
79274 Storage Bed Rails  (R-A2) 2 pcs.	All-Thread Bolt ø5/16"-18 x 3-1/2"  (R-B) 8 pcs.	Curved Washer ø5/16"  (R-C) 8 pcs.	Flat Washer ø5/16" x 16*2mm  (R-D) 8 pcs.	Spring Washer ø5/16"  (R-E) 8 pcs.	Hex Nut ø5/16" x L17  (R-F) 8 pcs.	Open Wrench 13mm  (R-G) 1 pc.

6/0-6/6 King Bed

79280 -- 6/6 Panel Headboard

79281 -- 6/6 Panel Footboard

79272 -- 5/0-6/6 Panel Side Rails

6/0-6/6 King Bed

79280 -- 6/6 Panel Headboard


79283 -- 6/6 Storage Footboard

79274 -- 5/0-6/6 Storage Bed Rails


6/6 King Bed

79280 -- 6/6 Panel Headboard

STEP 1

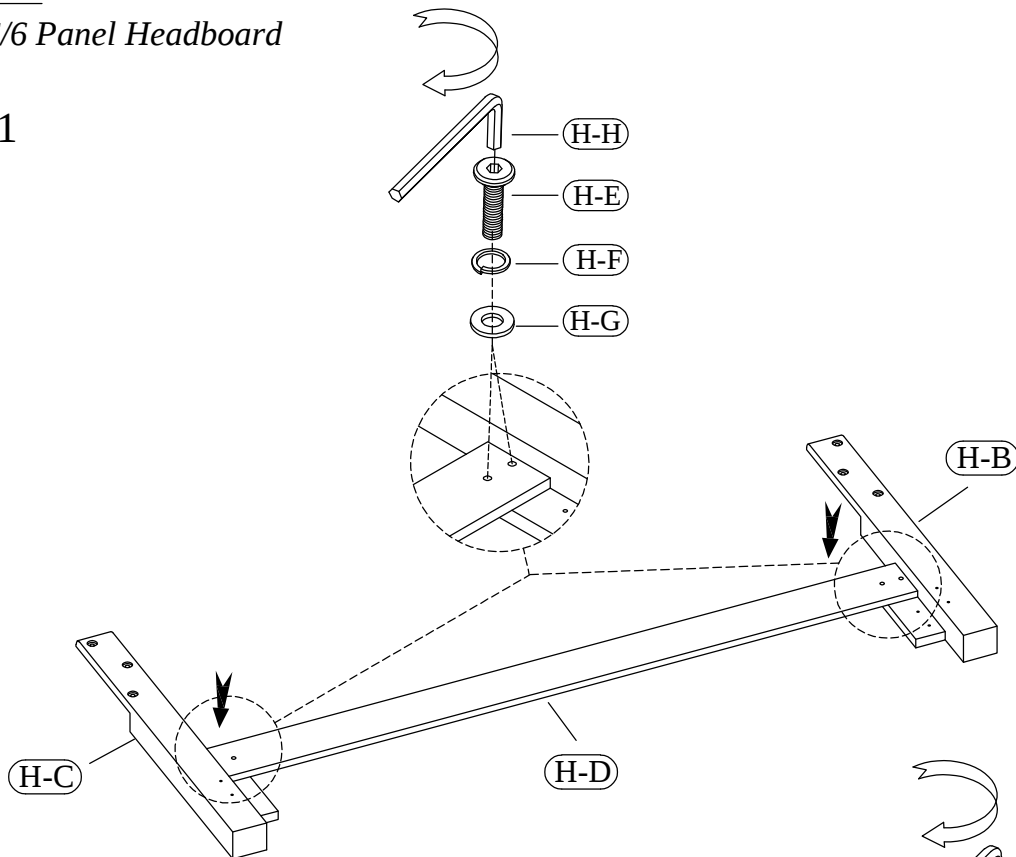

STEP 2

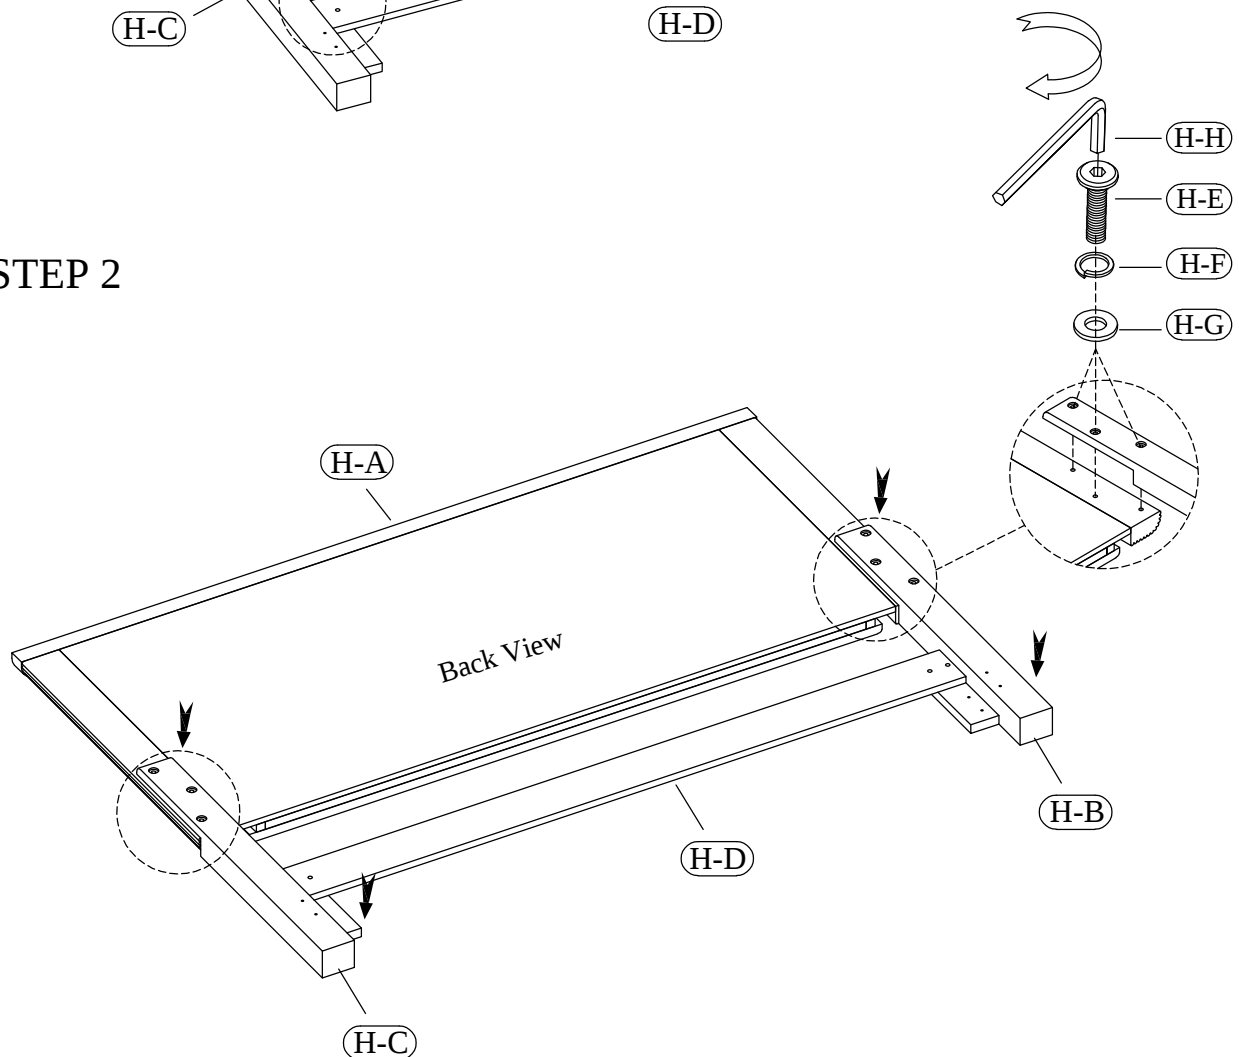


6/6 King Bed


79280 -- 6/6 Panel Headboard

79281 -- 6/6 Panel Footboard


STEP 3

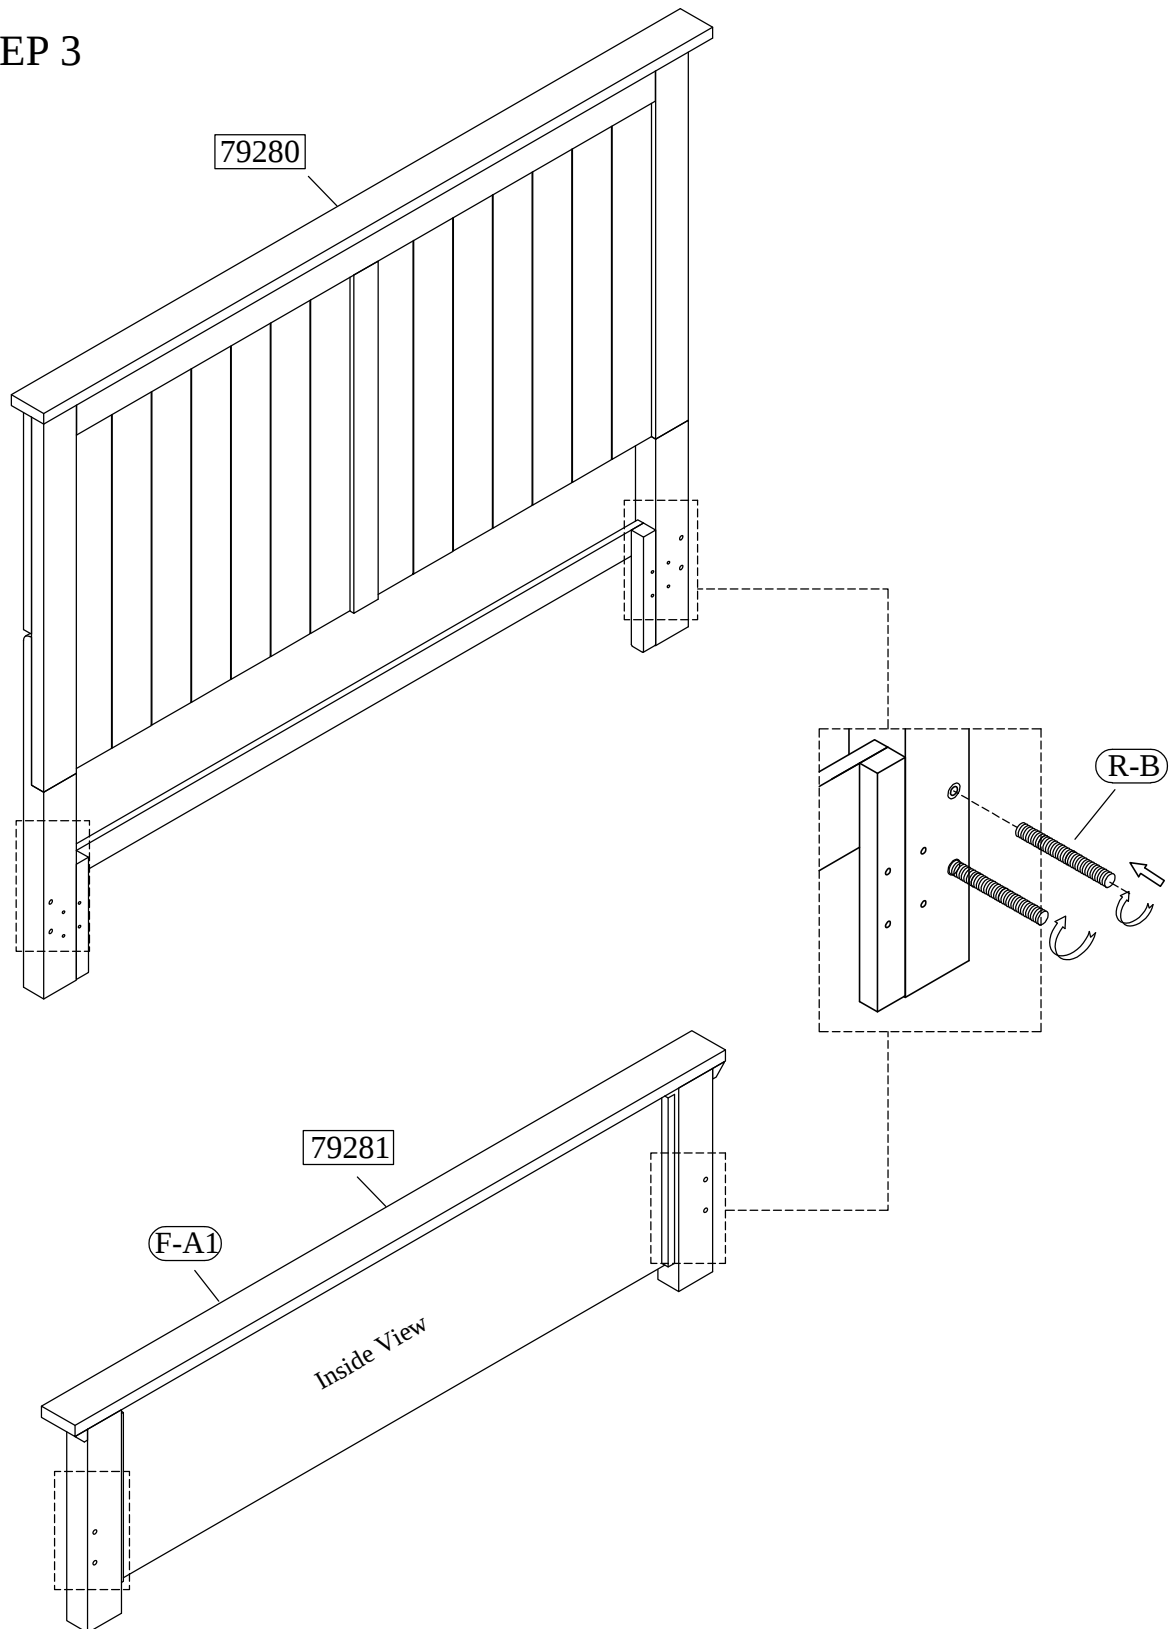


STEP 4

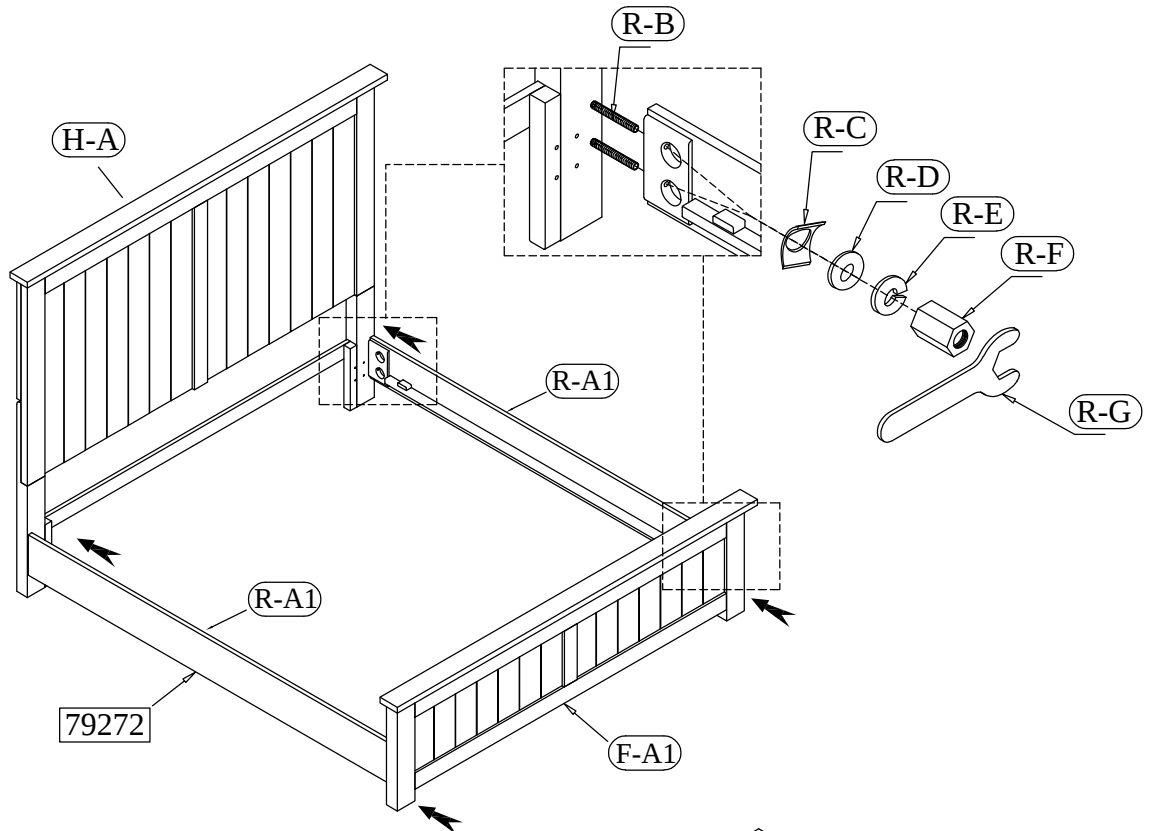

STEP 5

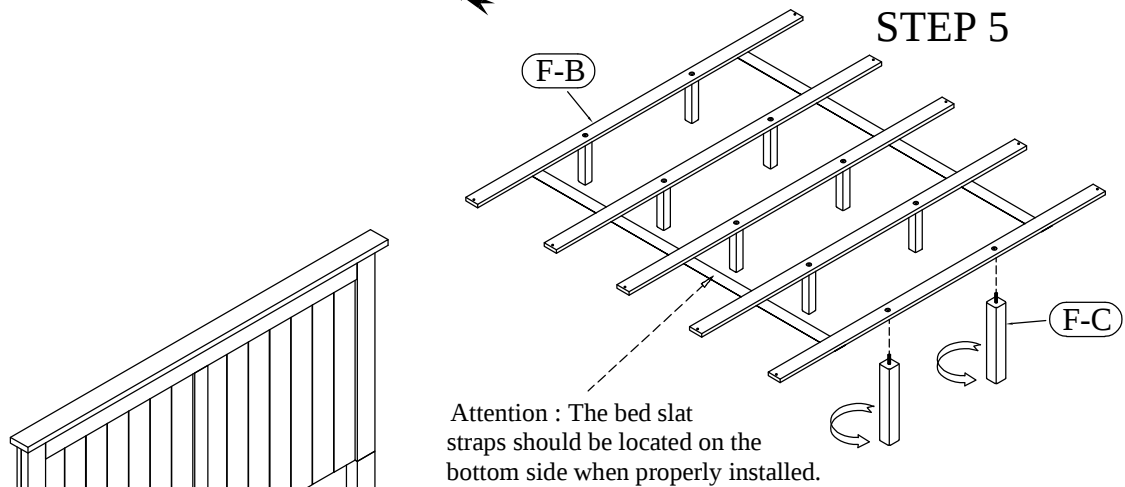

STEP 6

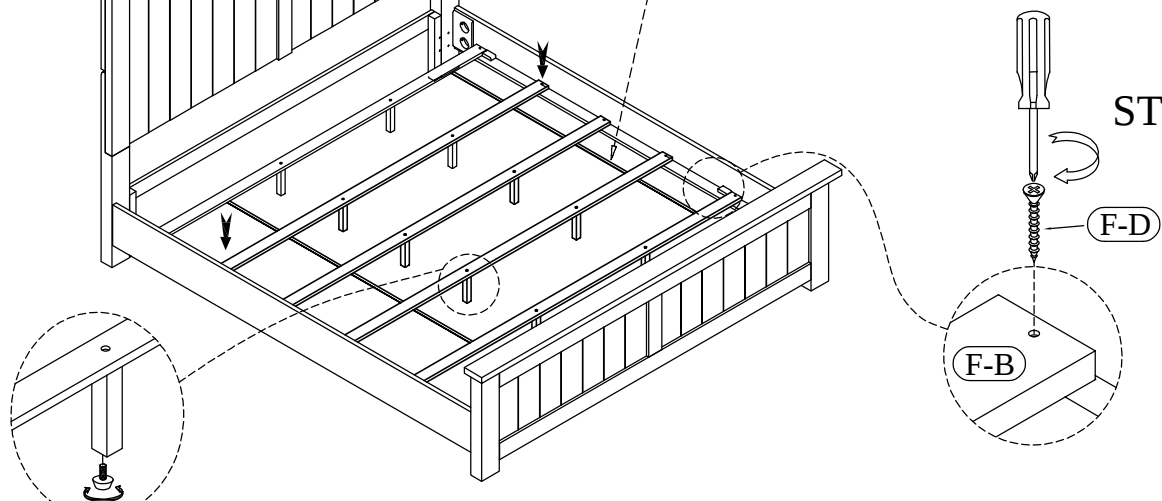



Adjustable Leveler

6/6 King Bed

79280 -- 6/6 Panel Headboard

79283 -- 6/6 Storage Footboard

STEP 3

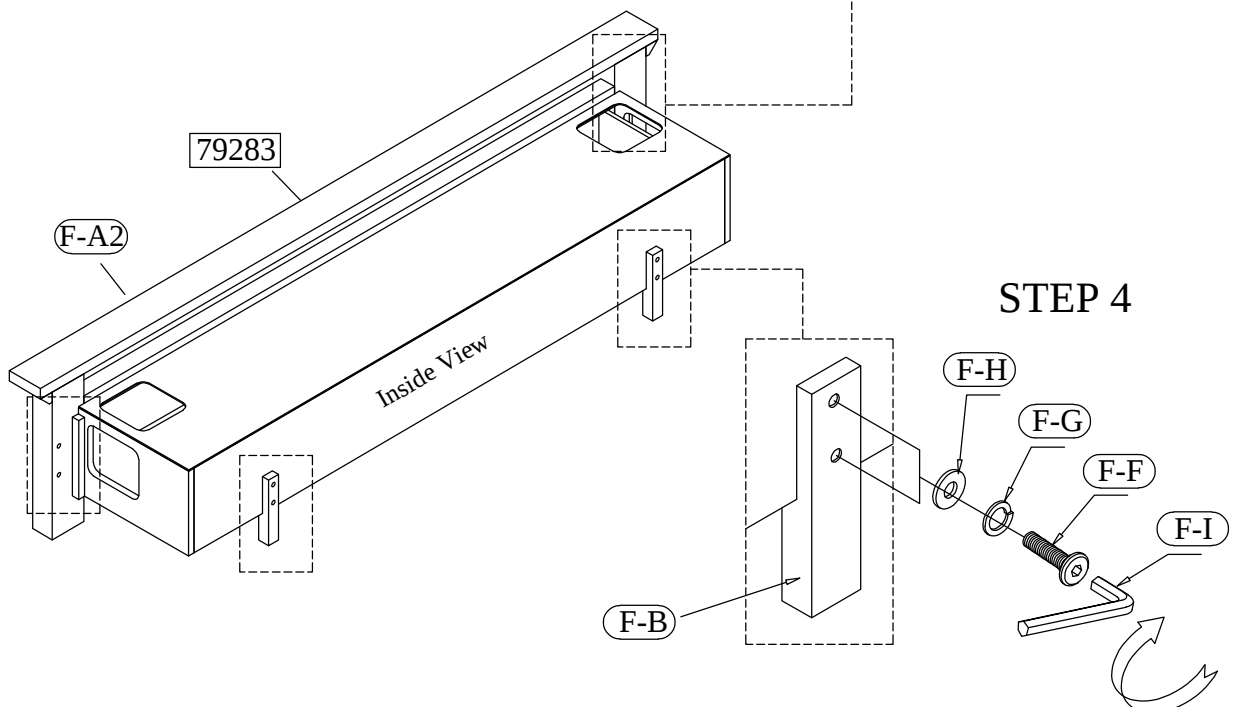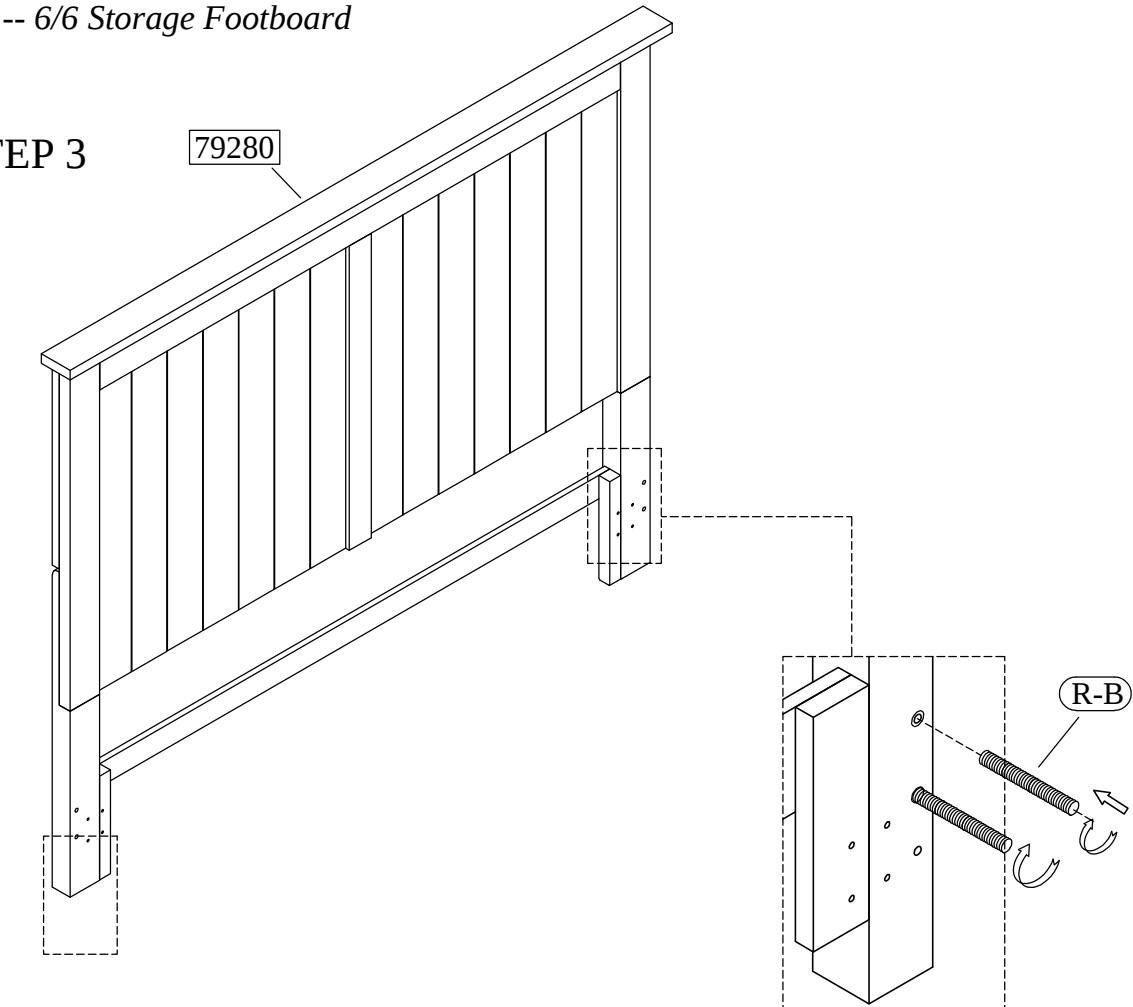


6/6 King Bed

79280 -- 6/6 Panel Headboard


79283 -- 6/6 Storage Footboard

79274 -- 5/0-6/6 Storage Bed Rails


STEP 5: Remove both drawers

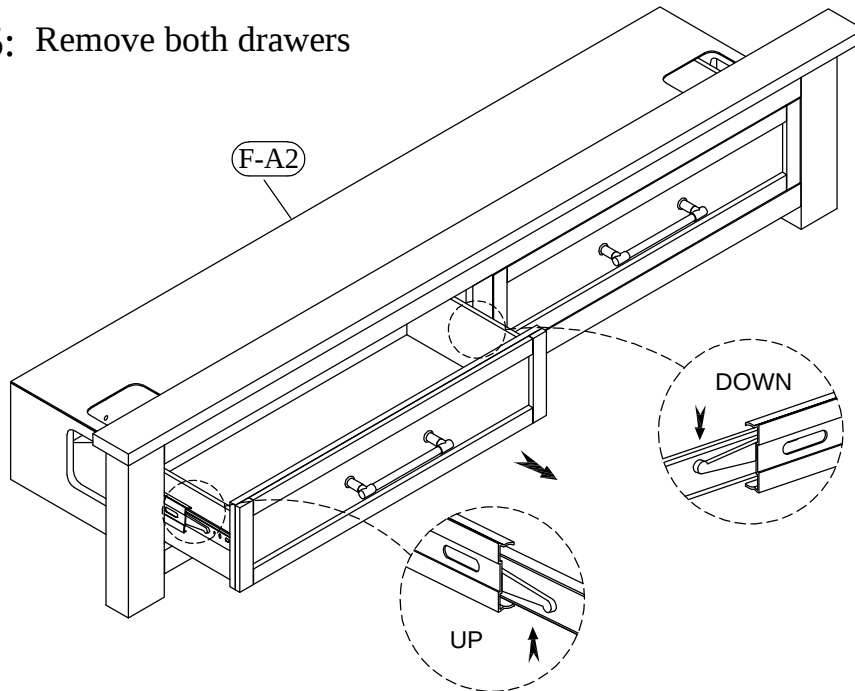


STEP 6

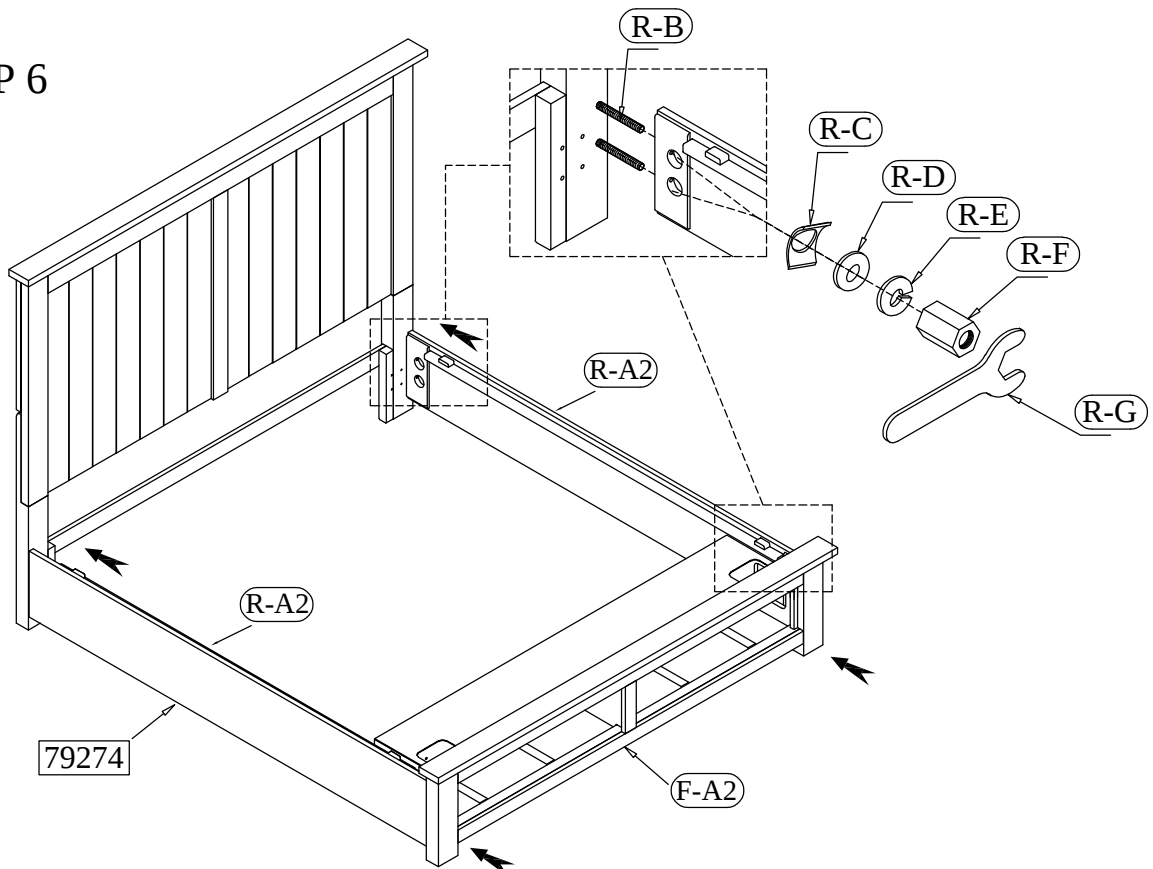


STEP 7

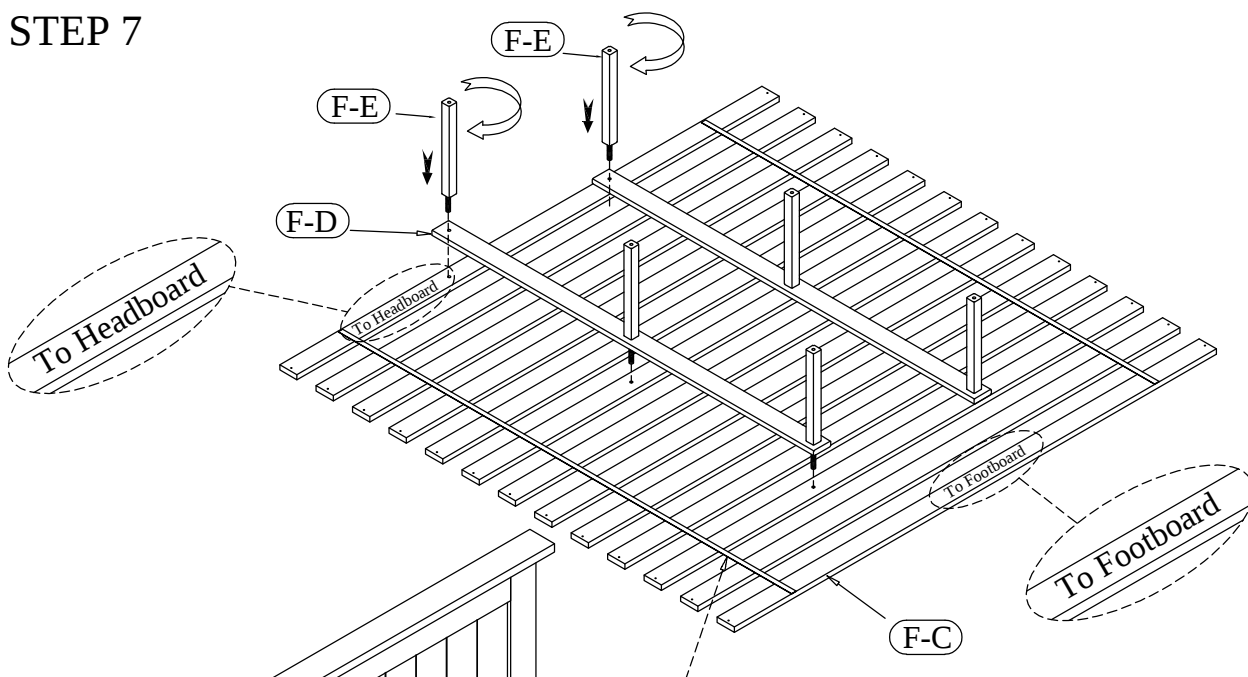


Attention : The bed slat straps should be located on the bottom side when properly installed.

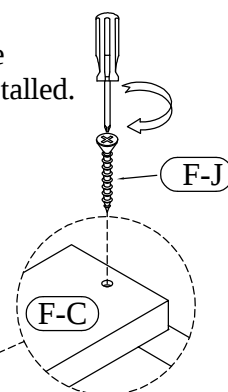

STEP 8

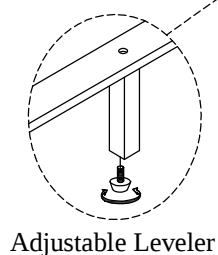


Adjustable Leveler

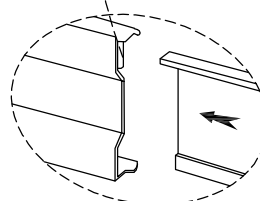

STEP 9

Attach both drawers

6/6 King Bed
79280 --6/6 Panel Headboard

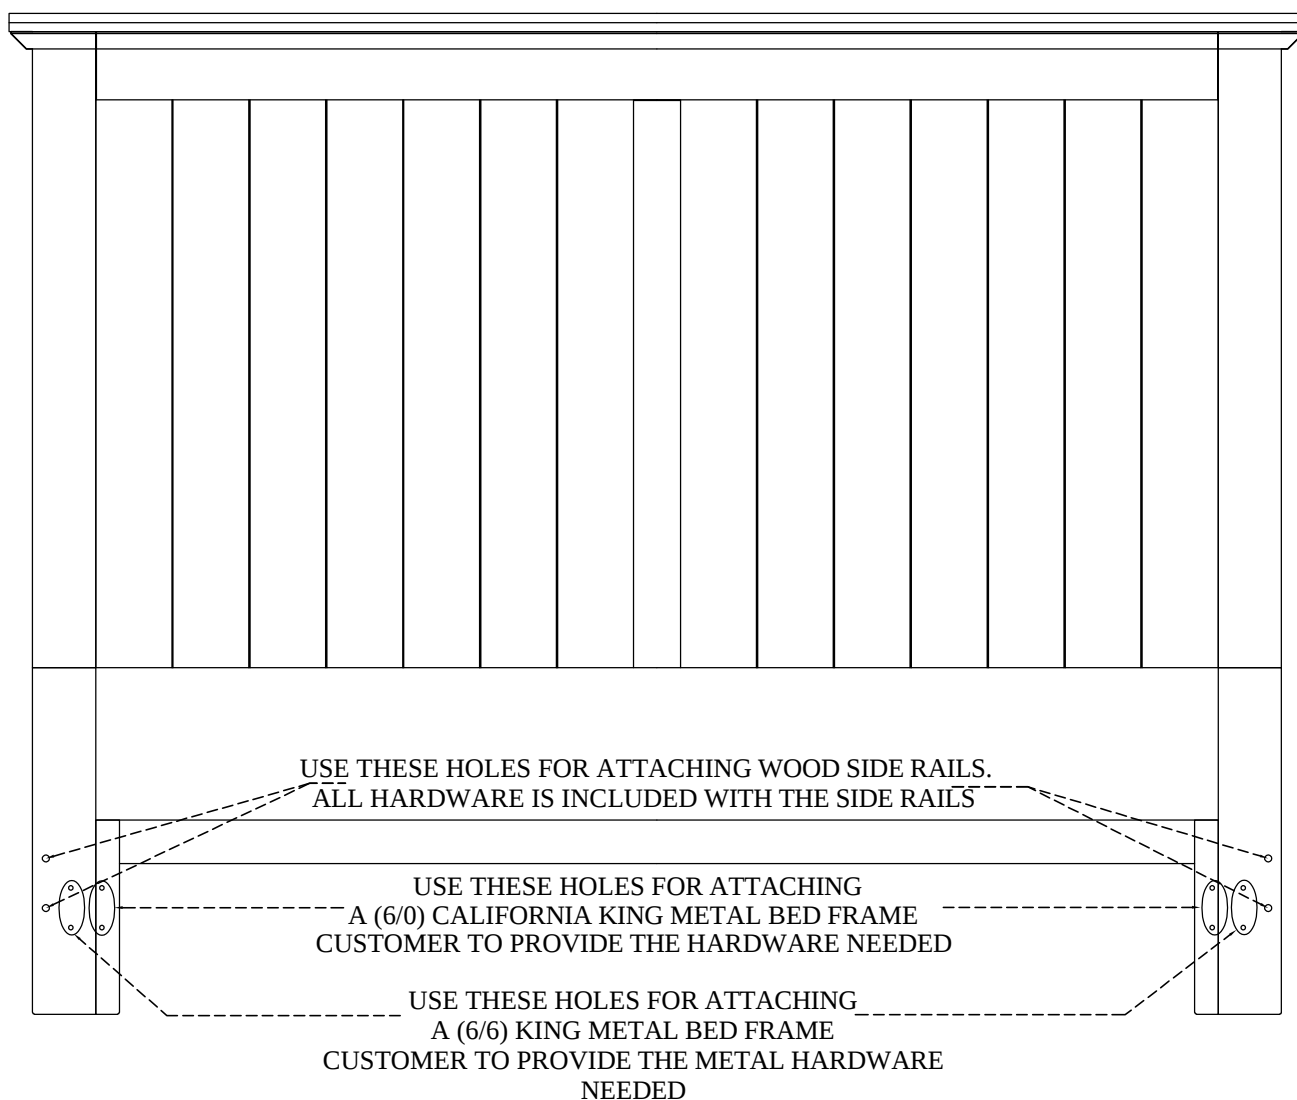

THE HEADBOARD MAY BE USE ALONE WITH
A CALIFORNIA KING OR A STANDARD KING
SIZE METAL BED FRAME.